AL400ULX Series

Power Supply/Charger

Models Include:

AL400ULX

- Single Output.

AL400ULPD4

- Four (4) Fuse Protected Outputs.

AL400ULPD8

- Eight (8) Fuse Protected Outputs.

AL400ULXPD16

- Sixteen (16) Fuse Protected Outputs.

AL400ULPD4CB

- Four (4) PTC Protected Outputs.

AL400ULPD8CB

- Eight (8) PTC Protected Outputs.

AL400ULXPD16CB

- Sixteen (16) PTC Protected Outputs.

For a red enclosure add an "R" suffix to the part #, e.g. AL400ULPD8R

Installation Guide





Rev. 013019



More than just power.™

Installing Company:	Service Rep. Name:		
Address:		Phone #:	

Overview:

Altronix AL400ULX is a power supply that converts a 115VAC, 60Hz input to a 12VDC or 24VDC regulating output (see specifications below).

The AL400ULX is a base power supply unit for the UL Listed multi-output power supply/charger series: AL400ULPD4, AL400ULPD4CB, AL400ULPD8, AL400ULPD8CB, AL400ULXPD16, AL400ULXPD16CB (Refer to AL400ULX Series Power Supply Configuration Reference Chart below).

AL400ULX Series Power Supply Configuration Reference Chart:

Altronix Model Number	Accessory Power Distribution Module(s)	Number of Outputs	Fused Outputs	PTC Outputs (auto- resettable)	Total Output	24VDC Total Output Current (A)		Supply Input Fuse	Power Supply Output Fuse Rating
AL400ULX AL400ULXX AL400ULXR	_	1	_	_	4	3	2.5	5A/ 250V	15A/ 32V
AL400ULPD4	PD4UL	4	√	_			3.5	5A/	15A/
AL400ULPD4CB	PD4ULCB	4	_	√			2.5	250V	32V
AL400ULPD8	PD8UL	0	√	-	4	3	3.5	5A/	15A/
AL400ULPD8CB	PD8ULCB	8	_	✓	4	3	2.5	250V	32V
AL400ULXPD16	Two (2) PD8UL	10	√	_			3.5	5A/	15A/
AL400ULXPD16CB	Two (2) PD8ULCB	16	_	✓			2.5	250V	32V

AL400ULPD4(CB) and AL400ULPD8(CB) are available in larger enclosure. Add "X" to the model number (e.g. AL400ULXPD4/CB).

Agency Listings:

All Units:

UL:

UL 294* - Access Control Systems

UL 603 - UL Listed for Power Supplies for use with Burglar-Alarm Systems.

UL 1069 - UL Listed for Hospital Signaling and Nurse Call Equipment.

UL1481 - UL Listed Power Supply for Fire Protective Signaling Systems.

*Access Control Performance Levels:

Destructive Attack - I; Endurance - IV; Line Security - I; Stand-by Power - IV.

cUL:

"Signal Equipment" Evaluated to CSA Standard C22.2 No.205-M1983.

AL400ULX(R), AL400ULXX(R) only:

CSFM - California State Fire Marshal Approved.

MEA - NYC Department of Buildings Approved.

AL400ULX(R) only:

FM - Factory Mutual Approved

Specifications:

Input:

• Input 115VAC, 60Hz, 3.5A.

Output:

- Class 2 Rated power-limited output(s).
- 12VDC or 24VDC selectable output(s).
 Burglar Alarm Aplications (UL 603):
 12VDC = 10VDC-13.2VDC.
 24VDC = 20VDC-26.4VDC.
- 4A total supply current at 12VDC or 3A total supply current at 24VDC.
- Filtered and electronically regulated output(s).
- Short circuit and thermal overload protection.

Supervision:

- AC fail supervision (form "C" contacts).
- Low battery and battery presence supervision (form "C" contacts).

Battery Backup:

- Built-in charger for sealed lead acid or gel type batteries.
- Automatic switch over to stand-by battery when AC fails
- Maximum charge current 0.7A.
- Zero voltage drop when switched over to battery backup.

LED Indicators:

AC input, DC output and Battery LED indicators.

Additional Features:

- Power supply, enclosure, cam lock and battery leads.
- All models are available in red enclosure (add an "R" suffix to the part #, e.g. AL400ULPD8R).

Power Supply Output Specifications:

Output	Switch Position	NO O
12VDC	SW1 - ON	OFF - 24V
24VDC	SW1 - OFF	ON - 12V


Stand-by Specifications (total current shown):

Output	4 hr. of Stand-by and	24 hr. of Stand-by and	60 hr. of Stand-by and
	5 Minutes of Alarm	5 Minutes of Alarm	5 Minutes of Alarm
12VDC / 40AH Battery	Stand-by = 4.0A	Stand-by = 1.0A	Stand-by = 300mA
	Alarm = 4.0A	Alarm = 4.0A	Alarm = 4.0A
24VDC / 12AH Battery	-	Stand-by = 200mA Alarm = 3.0A	_
24VDC / 40AH Battery	Stand-by = 3.0A	Stand-by = 1.0A	Stand-by = 300mA
	Alarm = 3.0A	Alarm = 3.0A	Alarm = 3.0A

AL400ULX Series Installation Guide - 3 -

Fig. 1 - AL400ULX Series

CAUTION: De-energize unit prior to servicing. For continued protection against risk of electric shock and fire hazard replace fuse with the same type and rating. Do not expose to rain or moisture.

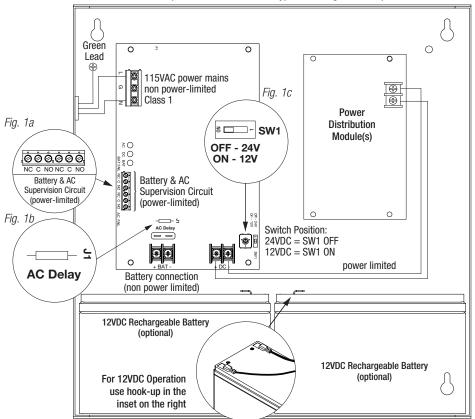

CAUTION: When power supply board is set for 12VDC use only one (1) 12VDC stand-by battery. Keep power-limited wiring separate from non power-limited. Use minimum 0.25" spacing.

Installation Instructions:

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/NFPA 72/ANSI, and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

- 1. Mount unit in the desired location. Mark and predrill holes in the wall to line up with the top two keyholes in the enclosure. Install two upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two upper screws; level and secure. Mark the position of the lower two holes. Remove the enclosure. Drill the lower holes and install two fasteners. Place the enclosure's upper keyholes over the two upper screws. Install the two lower screws and make sure to tighten all screws (Enclosure Dimensions, pgs. 11, 12). Secure enclosure to earth ground.
- 2. Set the unit to the desired DC output voltage by setting SW1 (Fig. 1c, pg. 4) to the appropriate position (Power Supply Output Specification Chart, pg. 3).
- 3. Secure cabinet to earth ground. Connect AC power (115VAC, 60 Hz to the terminals marked [L, N] (Fig. 1, pg. 4). Green "AC" LED on power supply board will turn on. This light can be seen through the LED lens on the door of the enclosure. Use 14 AWG or larger for all power connections (Battery, DC output, AC input). Use 22 AWG to 18 AWG for power-limited circuits (AC fail/Low Battery reporting).

Keep power-limited wiring separate from non power-limited wiring (115VAC, 60Hz Input, Battery Wires). Minimum 0.25" spacing must be provided.

CAUTION: Do not touch exposed metal parts. Shut branch circuit power before installing or servicing equipment. There are no user serviceable parts inside. Refer installation and servicing to qualified service personnel.

For Fire Alarm applications the outputs are "Special Applications" only see list *(refer to Appendix A, pg. 8)*. For other devices contact Underwriters Laboratories to ensure compatibility.

- Measure output voltage before connecting device. This helps avoiding potential damage.
 When servicing the unit, AC mains should be removed.
- 5. Connect devices to be powered:
 - a. For AL400ULX Power Supply: connect devices to the terminals marked [+ DC -] (Fig. 1, pg. 4).
 - b. For other Power Distribution Models: connect devices to be powered to the terminal pairs 1 to 4 marked [1P & 1N] through [4P & 4N] (Fig. 2a & 2b, pg. 7) or 1 to 8 marked [1P & 1N] through [8P & 8N] (Fig. 3a & 3b, pg. 7), carefully observing correct polarity.
- 6. For Access Control applications batteries are optional. When batteries are not used, a loss of AC will result in the loss of output voltage. When the use of stand-by batteries is desired, they must be lead acid or gel type. Connect one (1) 12VDC battery to the terminals marked [+ BAT –] for 12VDC operation. Use two (2) 12VDC batteries wired in series for 24VDC operation.
- Connect appropriate signaling notification devices to AC FAIL & BAT FAIL (Fig. 1a, pg. 4) supervisory relay outputs.
 - **Note:** When used in fire alarm, burglar alarm or access control applications, "AC Fail" relay should be utilized to visually indicate that AC power is on. To delay report for 6 hours cut "AC Delay" jumper (Fig. 1b, pg. 4).
- 8. Please ensure that the cover is secured with the provided key lock.

Wiring:

Use 14 AWG or larger for all power connections.

Note: Take care to keep power-limited circuits separate from non power-limited wiring (115VAC, Battery).

Maintenance:

Unit should be tested at least once a year for the proper operation as follows:

Output Voltage Test: Under normal load conditions the DC output voltage should be checked for the proper

voltage level (Power Supply Voltage Output Specifications Chart, pg. 3).

Battery Test: Under normal load conditions check that the battery is fully charged, check specified

voltage both at the battery terminal and at the board terminals marked [+ BAT –] to ensure

that there is no break in the battery connection wires.

Note: Maximum charging current under discharges is 0.7A.

Note: Expected battery life is 5 years; however, it is recommended changing batteries in

4 years or less if needed.

AL400ULX Series Installation Guide - 5 -

LED Diagnostics:

Power Supply Board

one only of the same				
Red (DC)	Green (AC)	Power Supply Status		
ON	ON	Normal operating condition.		
ON	OFF	Loss of AC. Stand-by battery supplying power.		
OFF	ON	No DC output.		
OFF	OFF	Loss of AC. Discharged or no stand-by battery. No DC output.		

Red (Bat)	Battery Status
ON	Normal operating condition.
OFF	Battery fail/low battery.

Power Distribution Module

Green	Power Distribution Module Status
ON	Normal operating condition.
OFF	No Power Output.

Terminal Identification:

Power Supply Board

Terminal Legend	Function/Description
L, G, N	Connect 115VAC 60Hz. to these terminals: L to Hot, N to Neutral. Do not use the [G] terminal.
+ DC -	12VDC @ 4A or 24VDC @ 3A continuous power-limited output.
AC Fail NC, C, NO	Indicates loss of AC power, e.g. connect to annunciator/alarm panel. Relay normally energized when AC power is present. Contact rating 1A @ 28VDC. AC Fail condition will report approximately within one (1) minute after loss of AC. To delay report for 6 hours cut jumper J1 on the Power Supply Board (AC trouble output delay option). If this mode is selected, the Power Supply Board must be reset by removing all power to it for 30 seconds.
Bat Fail NC, C, NO	Indicates low battery condition, e.g. connect to alarm panel. Relay normally energized when DC power is present. Contact rating 1A @ 28VDC. Low battery conditions will report approximately 21VDC (24VDC output setting) or approximately 10.5VDC (12VDC output setting). Battery presence detection will report approximately 1 minute after battery remains undetected (missing or removed).
+ BAT -	Stand-by battery connections. Maximum charge current 0.7A.

Power Distribution Module

Terminal Legend		Function/Description
PD4UL/PD4ULCB	PD8UL/PD8ULCB	Function/Description
1P to 4P	1P to 8P	Positive DC power outputs.
1N to 4N	1N to 8N	Negative DC power outputs.

- 6 - AL400ULX Series Installation Guide

Power Distribution Module(s):

Fig. 2a - PD4UL Power Distribution Board Non Power-Limited Outputs


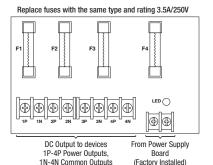


Fig. 3a - PD8UL Power Distribution Board Non Power-Limited Outputs

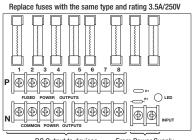

DC Output to devices 1P-8P Power Outputs, 1N-8N Common Outputs (Factory Installed) Fig. 2b - PD4ULCB Power Distribution Board Class 2 Power-Limited Outputs


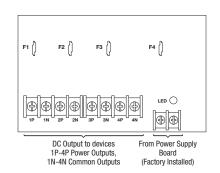


Fig. 3b - PD8ULCB Power Distribution Board Class 2 Power-Limited Outputs

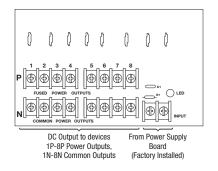

AL400ULX Series Installation Guide - 7 -

Appendix A - UL Listed Compatible Devices

A.1 Four (4) Wire Smoke DetectorsTable A-1 below lists four (4) wire smoke detectors compatible with AL400ULX output.

System Sensor Smoke Detector/Base	Detector Type	Max Stand-by Current (mA)	Alarm Current (mA)
B112LP	Base	0.12	36
B114LP	Base	*	*
B404B	Base	*	*
DH100ACDC	Photoelectric	0.15	0.70
DH100ACDCLP	Photoelectric	0.15	0.70
DH100ACDCLPW	Photoelectric	0.15	0.70
DH400ACDCI	Ionization Duct	25	95
DH400ACDCP	Photoelectric Duct	25	95
1112/24/D	Ionization	0.05	50
1424	Ionization	0.10	41
1451 (w/B402B Base)	Ionization	0.10	39
2112/24ATR	Photoelectric	0.50	60/70
2112/24AITR	Photoelectric	0.50	60/70
2112/24/D	Photoelectric	0.05	50
2112/24T/D	Photoelectric w/135° Thermal	0.05	50
2112/24TSRB	Photoelectric w/135° Thermal Supervisory Relay	15	45
2312/24TB	Photoelectric	0.12	50
2412 (12 volt)	Photoelectric	0.12	77
2424	Photoelectric	0.10	41
2451	Photoelectric	0.10	39
2451TH (with/B402B Base)	Photoelectric	0.10	39
2W-MOD	Loop Test/Maintenance Mod.	30	50
4W-B (12/24 volt)	Photoelectric I ³	0.05	23
4WT-B (12/24 volt)	Photoelectric I ³ w/Therm	0.05	23
4WTA-B (12/24 volt)	l ³ Photo w/Therm/Sounder	0.05	35
4WTR-B (12/24 volt)	l ³ Photo w/Therm/Relay	0.05	35
4WITAR-B (12/24 volt)	l ³ Photo w/Isolated Therm/Sounder/Relay	0.05	50
2W-MOD2	l ³ Loop Test/Maintenance Mod.	0.05	*
RRS-MOD	l ³ Reversing Relay/Sync Module	0.05	*
6424	Projected Beam	10	28.4
Beam 1224(S)	Projected Beam	17	38.5

^{*} Contact manufacturer for current draws.

A.2 Relays

Table A-2 below lists relays compatible with AL400ULX output.

Manufacturer	Model	Current (mA)
System Sensor	PR-1 PR-2 PR-3 EOLR-1 R-10T R-14T	15 30 30 30 30 23 23

Manufacturer	Model	Current (mA)
System Sensor	R-20T R-24T R-10E R-14E R-20E R-24E	40 40 23 23 40 40

Notes:


AL400ULX Series Installation Guide - 9 -


Notes:

- 10 - AL400ULX Series Installation Guide

Enclosure Dimensions (BC300): AL400ULX, AL400ULX, AL400ULPD4, AL400ULPD4, AL400ULPD8CB

13.5" x 13" x 3.25" (342.9mm x 330.2mm x 82.6mm)

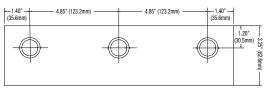

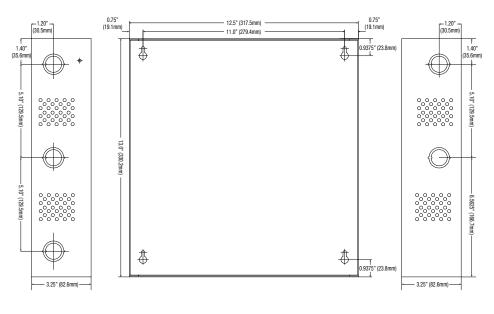



AL400ULX Series Installation Guide - 11 -

Enclosure Dimensions (BC400): AL400ULXX, AL400ULXXR, AL400ULXPD4, AL400ULXPD4CB, AL400ULXPD8, AL400ULXPD16, AL400ULXPD16CB

15.5" x 12" x 4.5" (393.7mm x 304.8mm x 114.3mm)

