



Access & Power Integration

## Altronix Trove1/Mercury Kits

### Models Include:

#### **T1MK1F4V**

4 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove1 enclosure with TM1 Altronix/Mercury backplane
- One (1) eFlow4NBV - Power Supply/Charger
- One (1) VR6 - Voltage Regulator
- One (1) ACM4 - Fused Access Power Controller

#### **T1MK1F4SV**

4 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove1 enclosure with TM1 Altronix/Mercury backplane
- One (1) eFlow4NBV - Power Supply/Charger
- One (1) VR6 - Voltage Regulator
- One (1) ACM4 - Fused Access Power Controller
- One (1) PDS8 - Dual Input Fused Power Distribution Module

#### **T1MK1F4DV**

4 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove1 enclosure with TM1 Altronix/Mercury backplane
- One (1) eFlow4NBV - Power Supply/Charger
- One (1) VR6 - Voltage Regulator
- One (1) ACM4CB - PTC Access Power Controller

#### **T1MK1F4SDV**

4 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove1 enclosure with TM1 Altronix/Mercury backplane
- One (1) eFlow4NBV - Power Supply/Charger
- One (1) VR6 - Voltage Regulator
- One (1) ACM4CB - PTC Access Power Controller
- One (1) PDS8CB - Dual Input PTC Power Distribution Module

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

## Installation Guide



All registered trademarks are property of their respective owners.

Rev. T1MKV121420

Installing Company: \_\_\_\_\_ Service Rep. Name: \_\_\_\_\_

Address: \_\_\_\_\_ Phone #: \_\_\_\_\_



**More than just power.™**

## Overview:

Altronix Trove Mercury kits are pre-assembled and consist of Trove1M1 enclosure/backplane with factory installed Altronix power supply/charger and sub-assemblies. These kits also accommodate various combinations of Mercury boards for up to four (4) doors in a single enclosure.

## Configuration Chart:


Altronix Model Number	220VAC 60Hz Input Current (A)	Power Supply Board Input Fuse Rating	Power Supply Board Battery Fuse Rating	Nominal DC Output Voltage		Maximum Supply Current for Main and Aux. Outputs on Power Supply board and ACM4/ACM4CB Access Power Controller's outputs (A)	Fail-Safe/Fail-Secure Outputs	Current Per ACM4(CB) Output (A)	ACM4(CB) Board Input Fuse (PTC) Rating	ACM4(CB) Board Output Fuse (PTC) Rating	PDS8(CB) Board Input Fuse (PTC) Rating	PDS8(CB) Board Output Fuse (PTC) Rating
				[DC]	[Aux]							
				24VDC Output Range (V)	24VDC Output Range (V)							
<b>T1MK1F4V</b>	2.1	5A/ 250V	7.5A/ 32V	20.28- 26.4	20.28- 26.4	24VDC @ 3.6A	4	2.5	10A/ 32V	3A/ 32V	10A/ 32V	3A/ 250V
<b>T1MK1F4DV</b>	2.1	5A/ 250V	7.5A/ 32V	20.28- 26.4	20.28- 26.4	24VDC @ 3.6A	4	2.0	9A	2.5A	9A	2.5A
<b>T1MK1F4SV</b>	2.1	5A/ 250V	7.5A/ 32V	20.28- 26.4	20.28- 26.4	24VDC @ 3.6A	4	2.5	10A/ 32V	3A/ 32V	10A/ 32V	3A/ 250V
<b>T1MK1F4SDV</b>	2.1	5A/ 250V	7.5A/ 32V	20.28- 26.4	20.28- 26.4	24VDC @ 3.6A	4	2.0	9A	2.5A	9A	2.5A

## Installation Instructions:




Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

1. Remove backplane from enclosure. Do not discard hardware.
2. Mark and predrill holes in the wall to line up with the top two (2) keyholes in the enclosure. Install two upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two upper screws; level and secure. Mark the position of the lower two holes. Remove the enclosure. Drill the lower holes and install the two fasteners. Place the enclosure's upper keyholes over the three upper screws. Install the two lower screws and make sure to tighten all screws.
3. Mount included UL Listed tamper switch (Altronix Model T112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (*Fig. 1, pg. 2*). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
4. Position Mercury access controller modules over corresponding spacers and depress onto snap on spacers, *Fig. 2, pg. 3*.
5. Refer to the *eFlow Power Supply/Charger Installation Guide* for eFlow4NBV, and corresponding Sub-Assembly Installation Guide for ACM4(CB), PDS8(CB) and VR6 for further installation instructions.
6. Mount backplane to enclosure with hardware.

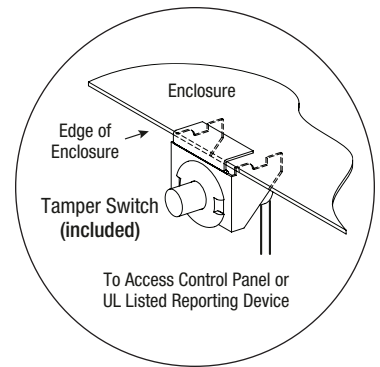Fig. 1



## Hardware:

 Snap On Spacer |  5/16" Pan Head Screw |  Lock Nut

## T1MK1F4V and T1MK1F4DV: Configuration of Mercury Boards:

1. Fasten snap on spacers onto metal pems configuration (A), (B), (C) or (D) of backplane depending on the access controller (Fig. 2, pg. 3).
2. Position access controller module over corresponding spacers and depress onto snap on spacers (Fig. 2a, pg. 3).
3. Mount backplane to enclosure with hardware.

### Access Controller Position Chart for the Following Models:

Mercury Access Controller	Pem Mounting
EP1502, LP1502, MR52, MR16IN, MR16OUT	(A)
EP1501, LP1501, MR51e, MR62e	(B)
MR50	(C)
EP2500, LP2500, MUX8	(D)

Fig. 2


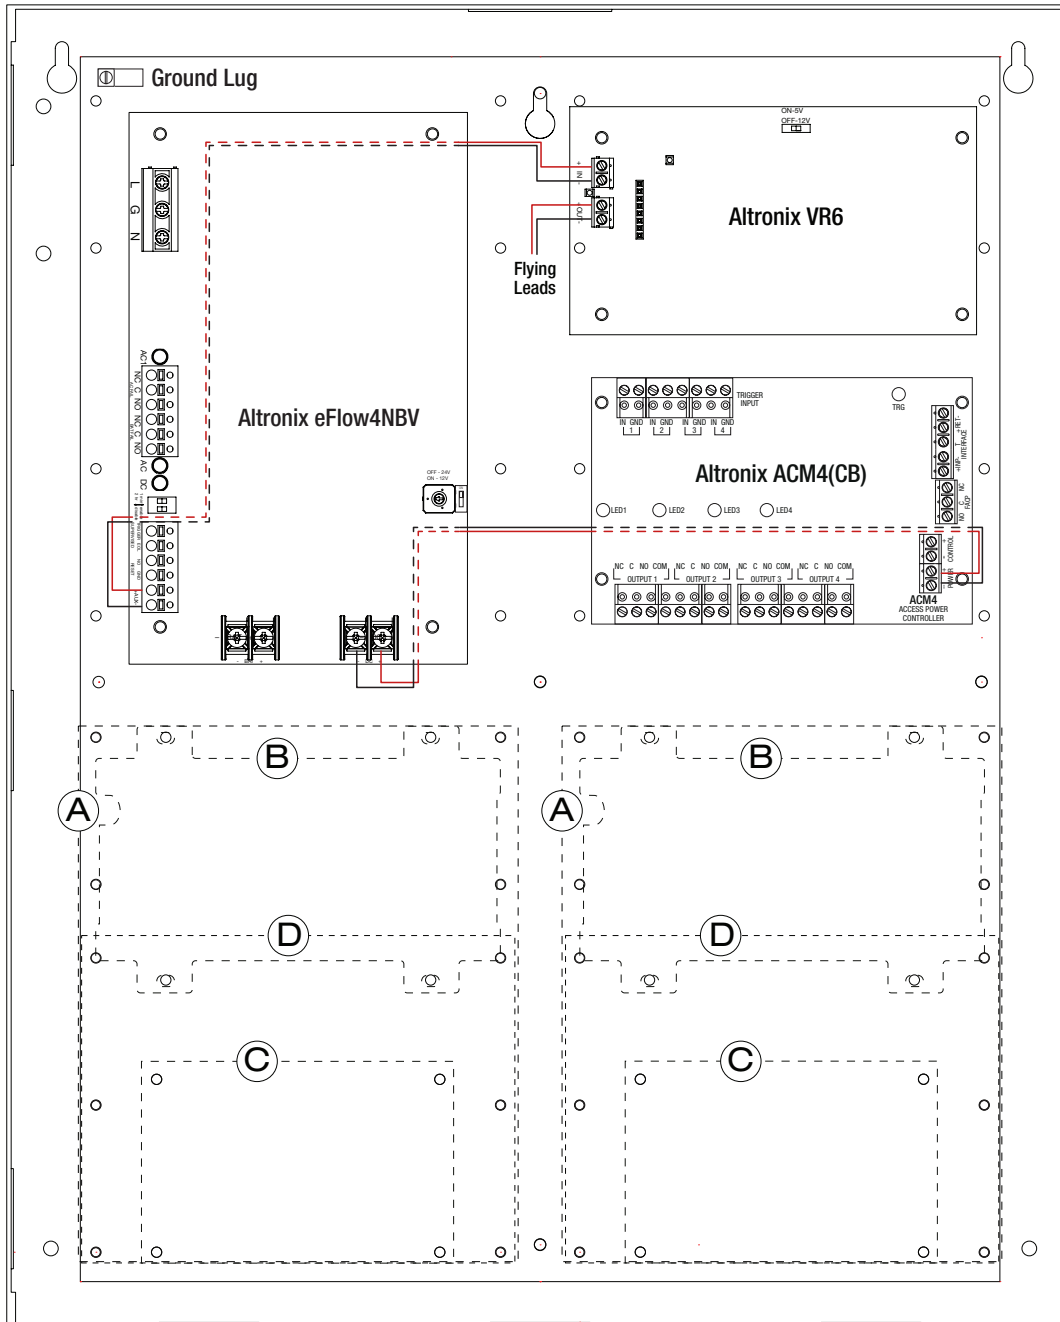


Fig. 2a

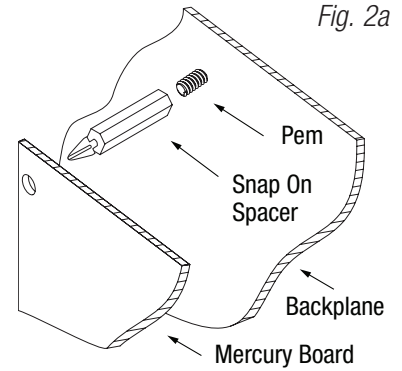

## T1MK1F4S and T1MK1F4SD: Configuration of Mercury Boards:

1. Fasten snap on spacers onto metal pems configuration (A), (B), (C) or (D) of backplane depending on the access controller (*Fig. 3, pg. 4*).
2. Position access controller module over corresponding spacers and depress onto snap on spacers (*Fig. 3a, pg. 4*).
3. Mount backplane to enclosure with hardware.

### Access Controller Position Chart for the Following Models:

Mercury Access Controller	Pem Mounting
EP1502, LP1502, MR52, MR16IN, MR16OUT	(A)
EP1501, LP1501, MR51e, MR62e	(B)
MR50	(C)
EP2500, LP2500, MUX8	(D)

Fig. 3



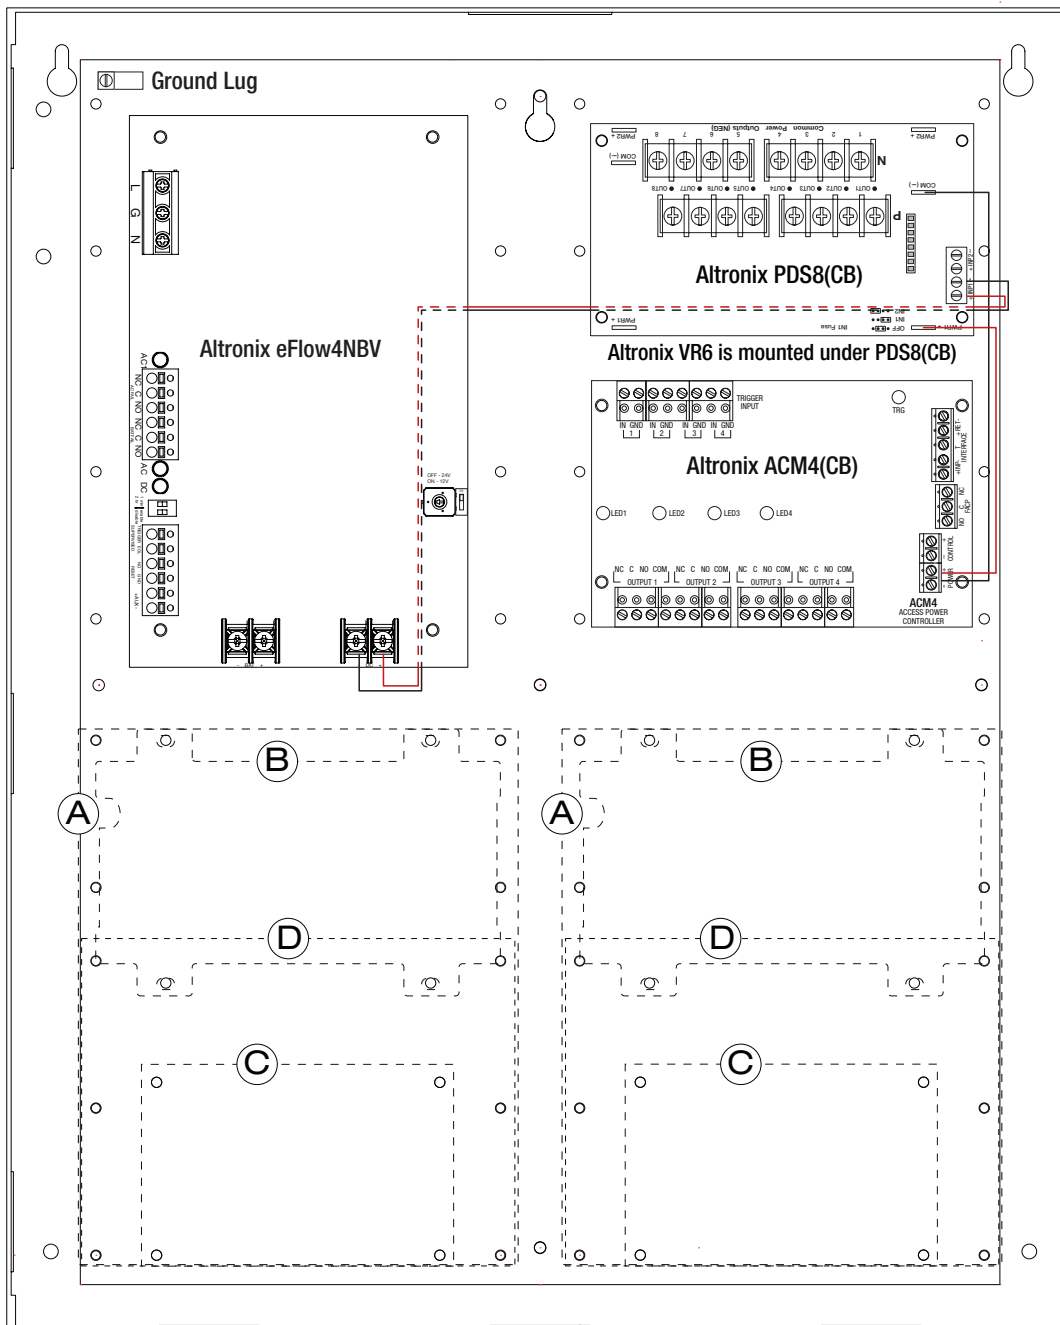


Fig. 3a



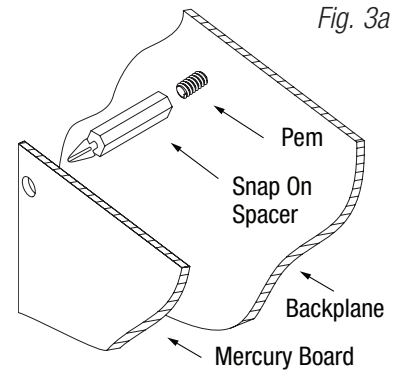

## eFlow Power Supply/Chargers can be Controlled and Monitored while Reporting Power/Diagnostics from Anywhere over the Network...

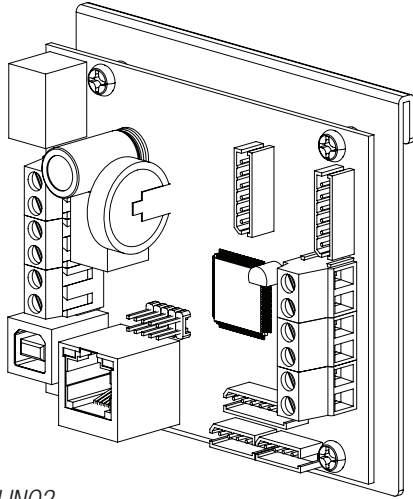

LINQ2

# LINQ™


### LINQ2 - Network Communication Module

LINQ2 provides remote IP access to real-time data from eFlow power supply/chargers to help keep systems up and running at optimal levels. It facilitates fast and easy installation and set-up, minimizes system downtime, and eliminates unnecessary service calls, which helps reduce Total Cost of Ownership (TCO) - as well as creating a new source of Recurring Monthly Revenue (RMR).

### Features:

- UL Listed in the U.S. and Canada.
- Local or remote control of up to (2) two Altronix eFlow power output(s) via LAN and/or WAN.
- Monitor real time diagnostics: DC output voltage, output current, AC & battery status/service, input trigger state change, output state change and unit temperature.
- Access control and user management: Restrict read/write, Restrict users to specific resources
- Two (2) integral network controlled Form "C" Relays.
- Three (3) programmable input triggers: Control relays and power supplies via external hardware sources.
- Email and Windows Dashboard notifications
- Event log tracks history.
- Secure Socket Layer (SSL).
- Programmable via USB or web browser - includes operating software and 6 ft. USB cable.

### LINQ2 Mounts Inside any Trove Enclosure

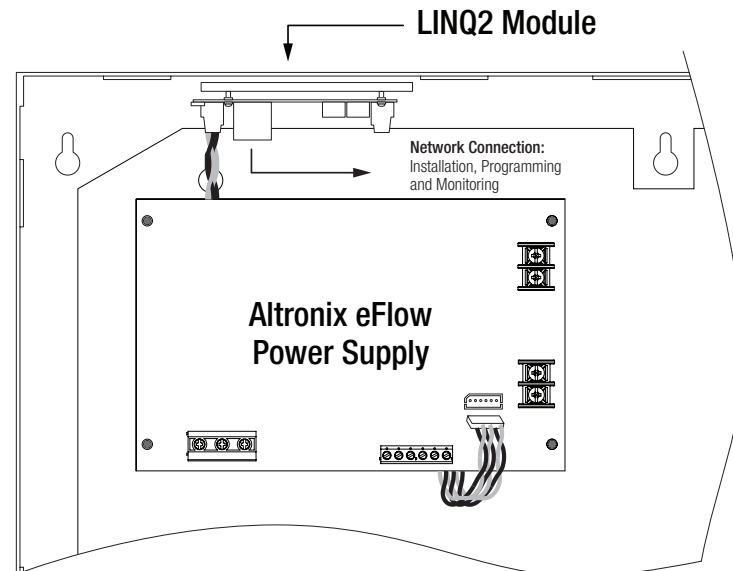


## Notes:

## Notes:

## Trove1 Enclosure Dimensions (H x W x D approximate):

18" x 14.5" x 4.625" (457mm x 368mm x 118mm)

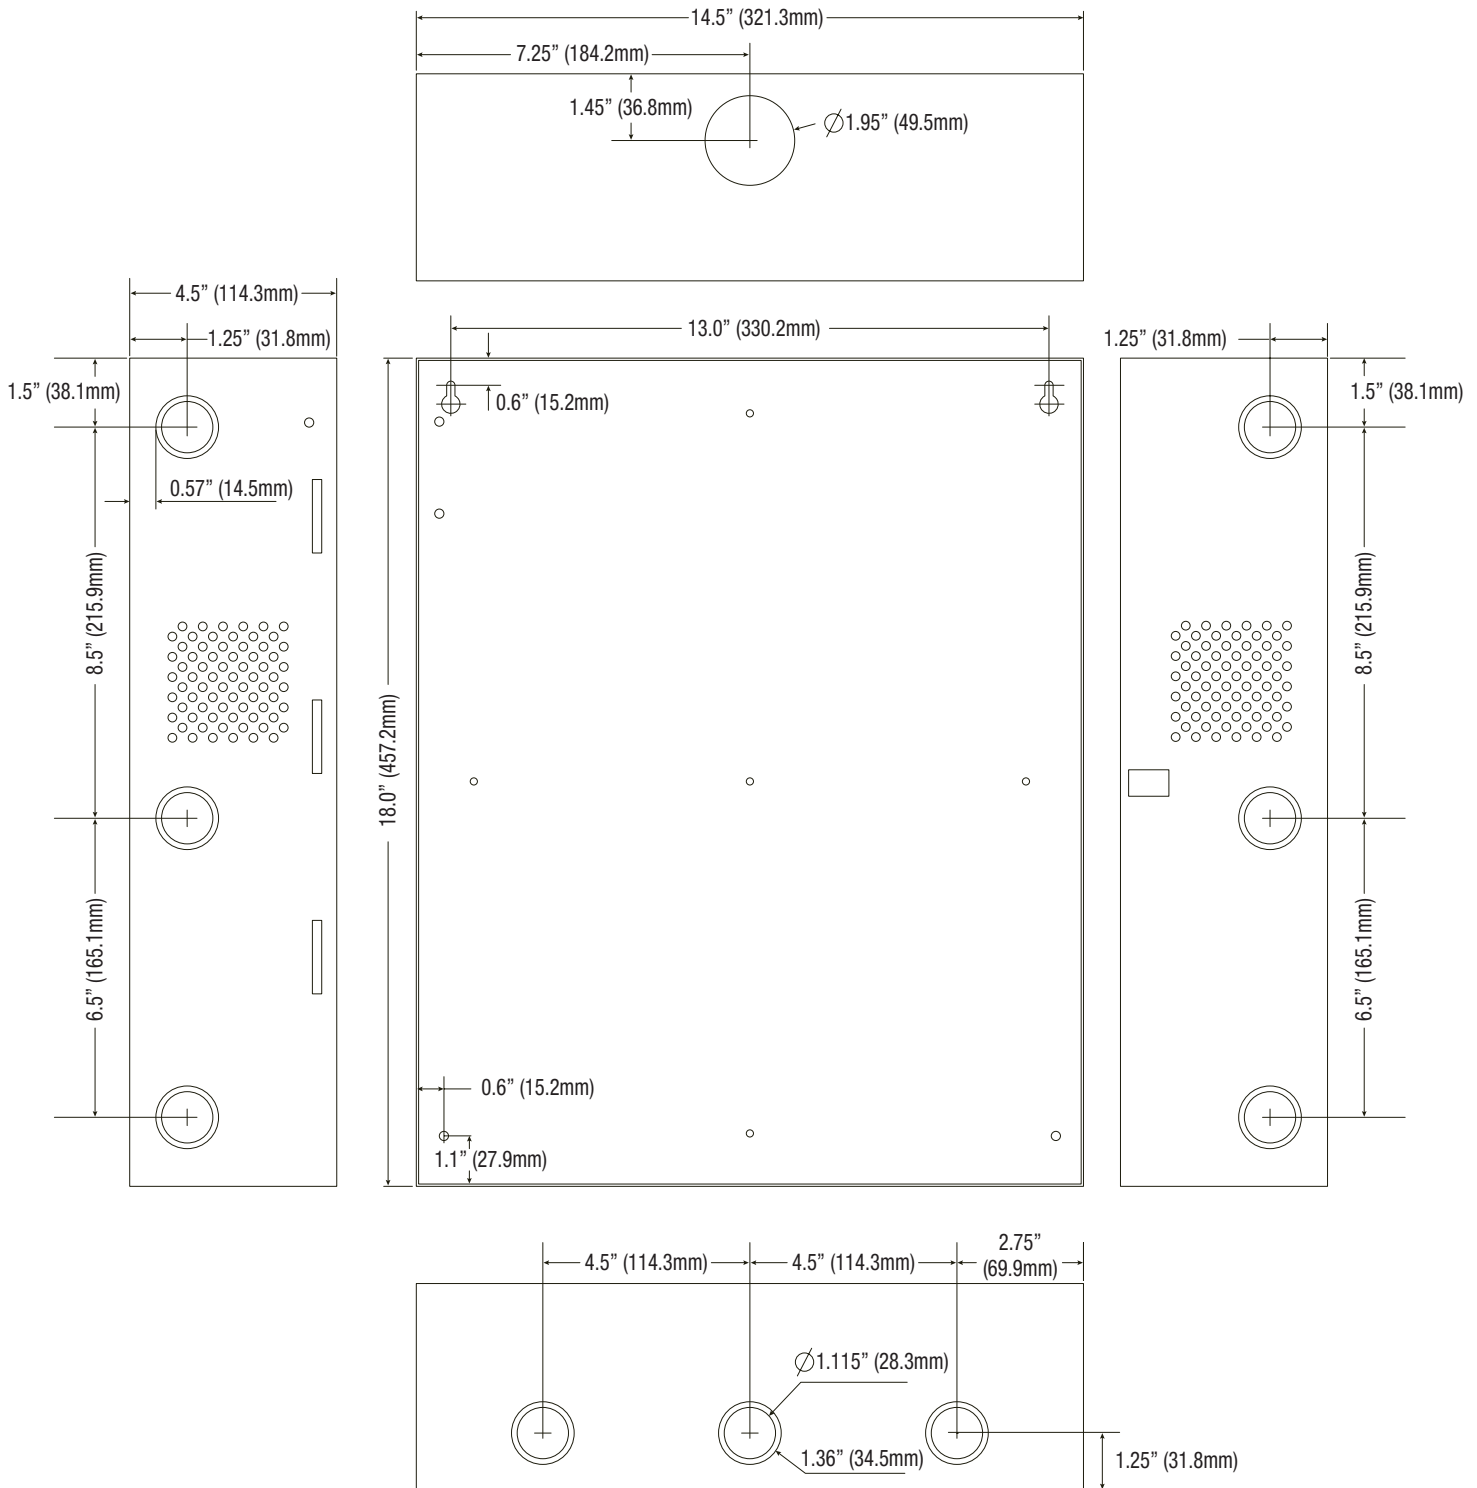

Altronix is not responsible for any typographical errors. Product specifications are subject to change without notice.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056  
 website: [www.altronix.com](http://www.altronix.com) | e-mail: [info@altronix.com](mailto:info@altronix.com) | Lifetime Warranty  
 IITrove1M1V Kit Series

J05U

