

**Access & Power Integration** 

# **Altronix Rack Kits**

## **Models Include:**

## T1RAL3F8

# 8 Door Kit with Fused Outputs

## Fully assembled kit includes:

- Trove1R rack enclosure with Altronix backplane (TAL1R)
- (1) eFlow6NB Power Supply/Charger
- (1) VR6 Voltage Regulator
- (1) PDS8 Fused Dual Output Power Distribution Module
- (1) ACMS8 Fused Dual Output Access Power Controller

# **T1RAL33F16**

## 16 Door Kit with Fused Outputs

## Fully assembled kit includes:

- Trove1R rack enclosure with Altronix backplane (TAL1R)
- (2) eFlow6NB Power Supply/Chargers
- (2) ACMS8 Fused Dual Output Access Power Controllers

## T1RAL3F8D

## 8 Door Kit with PTC Outputs

## Fully assembled kit includes:

- Trove1R rack enclosure with Altronix backplane (TAL1R)
- (1) eFlow6NB Power Supply/Charger
- (1) VR6 Voltage Regulator
- (1) PDS8CB PTC Dual Output Power Distribution Module
- (1) ACMS8CB PTC Dual Output Access Power Controller

## **T1RAL33F16D**

## 16 Door Kit with PTC Outputs

## Fully assembled kit includes:

- Trove1R rack enclosure with Altronix backplane (TAL1R)
- (2) eFlow6NB Power Supply/Chargers
- (2) ACMS8CB PTC Dual Output Access Power Controllers

All components of these Trove kits are UL Listed sub-assemblies.

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

# Installation Guide

( (



Rev. T1RAL111518 More than just power.™

Installing Company:	Service Rep. Name:	
Addross		Dhono #:

### **Overview:**

Altronix Trove Rack kits are pre-assembled and consist of Trove1AL1R enclosure/backplane with factory installed Altronix power supply/charger(s) and sub-assemblies.

## **Configuration Chart:**

		Power	Power	1	nal DC Voltage [Aux]	Maximum Supply Current for Main	Secure or Outputs	Output (A)	Board PTC) Rating	oard PTC) Rating		rd PTC) Rating
Altronix Model Number	120VAC 60Hz Input Current (A)	Supply Board Input Fuse Rating	Supply Board Battery Fuse Rating	Output Range (VDC)	Output Range (VDC)	and Aux. Outputs on Power Supply board and ACMS8(CB) Access Power Controllers' outputs	Fail-Safe/Fail-Secure Dry Form "C" Outputs	Current Per ACMS8(CB) 0t	ACMS8(CB) Bo	ACMS8(CB) Board Output Fuse (PTC)	PDS8(CB) Board Input Fuse (PTC)	PDS8(CB) Board Output Fuse (PTC)
T1RAL3F8	3.5	5A/ 250V	10A/ 32V	20.19- 26.4	20.19- 26.4	24VDC @ 5.6A	8	2.5	15A/ 32V	3A/ 32V	10A/ 32V	3A/ 32V
T1RAL3F8D								2.0	9A	2.5A	9A	2.5A
T1RAL33F16 7				Power Supply 1 (24VDC)				4544				
	5A/	10A/	20.19- 26.4	20.19- 26.4	24VDC @ 5.6A	16	2.5	15A/ 32V	3A/ 32V	_	-	
T1RAL33F16D	1	250V	32V	Power Supply 2 (12VDC)		] 10						
				10.0- 13.2	10.1- 13.2	12VDC @ 5.3A		2.0	9A	2.5A	_	_

### **Specifications:**

### **Agency Listings:**

CE European Conformity.

### Mechanical:

- Black enclosure with ample knockouts for convenient access.
- Includes: tamper switch, cam lock and mounting hardware.
- Modular 2U standard EIA 19" drawer with extendable slides up to 48".
- Dimensions (H x W x D): 3.375" x 19.0" x 26.5" (85.8mm x 482.6mm x 673.1mm)

### **Included Accessories:**

- One (1) tamper switch (Altronix Model TS112 or equivalent).
- Cam lock.

### **Available Accessories** (not included):

- RE2: Rack Mount Battery Enclosure accommodates up to four (4) 12VDC/7AH batteries.
- WM5, WM25, WM100: Magnetic Cable Tie Mounts (5, 25, 100 counts).

- 2 - Trove1RAL Series Installation Guide

### Installation Instructions for Altronix Trove Rack Kits:

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. These products are for indoor use only and must be installed within the protected premises.


**Note:** First assemble and Install Z Bracket Wire Management Accesory *(refer to Z Bracket Installation pg. 4)* 

- Remove backplane from enclosure prior to installing into rack cabinet (do not discard hardware).
- 2. In order to mount included UL Listed tamper switch (Altronix Model TS112 or equivalent) turn the enclosure upside down. Punch out the knockout in designated location, on the back of the unit, from outside of the drawer (Fig. 1, pg. 3). Insert the tamper switch into the knockout from outside of the drawer with the button facing outwards and spaded connectors inside the drawer. Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device.


To activate alarm signal open the rack drawer.

- 3. Slide the rack enclosure into an open 2U location in the four post rack cabinet.
- 4. Utilizing proper fasteners attach front ears to the rack rails.
- 5. Attach the rear of the adjustable slides to the rear rails of the rack cabinet with the proper fasteners.
- 6. Secure the rack cover (Fig. 2a, pg. 3) and rack drawer to earth ground (Fig. 2b, pg. 3).



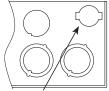

Tamper Switch mounting location

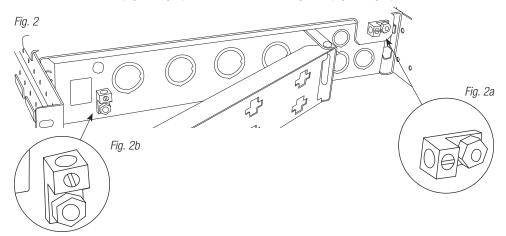


- Make sure that all internal configurations (wiring, voltage selection, switch settings, etc.) are complete before mounting backplane back into enclosure.
- 8. Refer to the *eFlow Power Supply/Charger Installation Guide* for eFlow6NB and corresponding sub-assembly Installation Guides for the following models: ACMS8(CB), PDS8(CB), VR6 for further instructions.

Trove1RAL Series Installation Guide - 3 -

## **Assembling and Attaching**

## Z Bracket Wire Management Accessory (included):

Altronix Trove Rack enclosures include Z Bracket, a convenient and reliable wire management accessory.

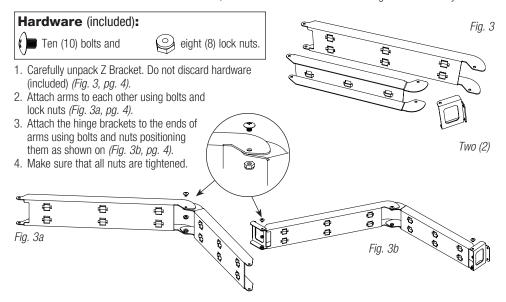

- 5. Attach the hinge bracket on the longer side of Z Bracket to the adjustable slide using bolts and lock nuts (included) (Fig. 4, 4a, pg. 4).
- 6. Attach the hinge bracket on the shorter side of Z Bracket to the rear of the rack enclosure using bolts (included).



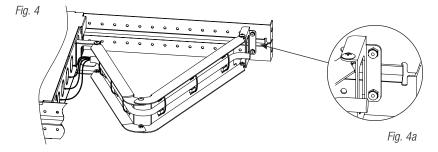


Fig. 5

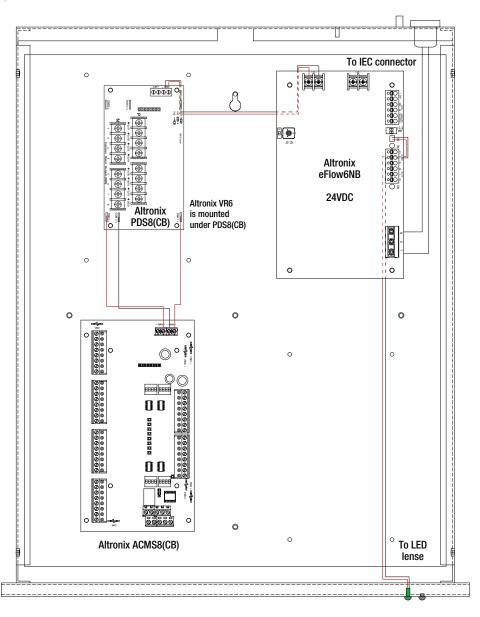

Trove1RAL Series Installation Guide - 5 -

Fig. 6

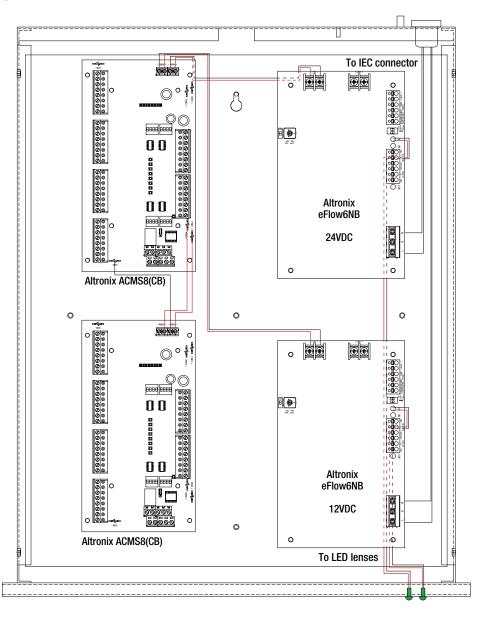


### **Notes:**

Trove1RAL Series Installation Guide -7 -

### **Trove1R Enclosure Dimensions:**

3.375" x 19.0" x 26.5" (85.8mm x 482.6mm x 673.1mm). Shown with Z Bracket attached.

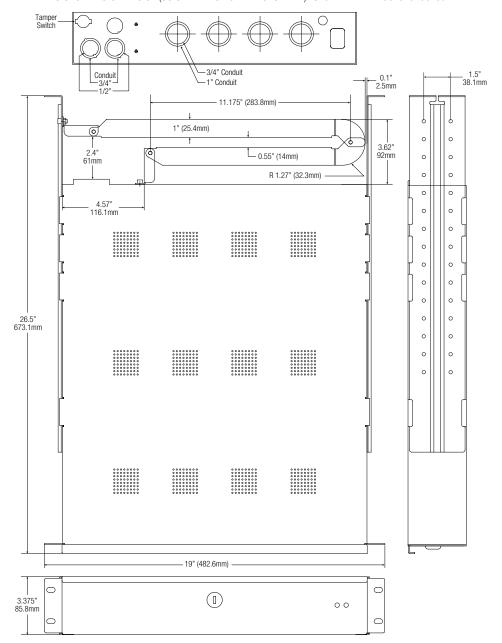

Altronix is not responsible for any typographical errors.



