

VertiLine8 Series

CCTV Rack Mount Power Supplies

Models Include:

VertiLine8

- 24VAC or 28VAC @ 5A
- Eight (8) fuse protected outputs

VertiLine83

- 24VAC or 28VAC @ 10A
- Eight (8) fuse protected outputs

VertiLine8D

- 24VAC or 28VAC @ 5A
- Eight (8) PTC protected outputs

VertiLine83D

- 24VAC or 28VAC @ 10A
- Eight (8) PTC protected outputs

Installation Guide





Rev. 031808

More than just power.™

Installing Company:	Service Rep. Name:		
Address:		Phone #:	

Overview:

Altronix VertiLine CCTV Rack Mount Power Supplies provide 8 power outputs in a space saving 1U EIA 19" rack mount chassis which may be rack, wall or shelf mounted. The units feature individually selectable 24VAC and/or 28VAC power outputs with surge suppression. VertiLine CCTV Rack Mount Power Supplies are also available in sixteen (16) and twenty-four (24) output models with various power ratings.

Specifications:

Input:

• Selectable 115VAC, 60Hz or 240VAC, 50/60Hz input. **Output:**

- Eight (8) individually selectable 24VAC or 28VAC fuse or PTC protected power outputs with 0FF position.
- Outputs are rated @ 3.5A (fused) or 2.5A (PTC).
- Surge suppression.

Features:

- Eight (8) power LEDs.
- Removable terminal blocks with locking screw flange.

Features (cont'd):

- Illuminated master power disconnect circuit breaker with manual reset.
- IEC 320 3-wire grounded line cord (detachable).

Mechanical:

- Units can be rack, wall or shelf mounted.
- Modular 1U standard EIA 19" rack mount chassis
- Enclosure Dimensions (H x W x D approx.): 1.625" x 19.125" x 8.5" (41.3mm x 486mm x 216mm).

Eight (8) Output Rack Mount Configuration Reference Chart:

Altronix Model Number	Output Voltage (VAC)	Total Output Current (Power)	Number of Outputs	Fuse Output Protection	Class 2 Rated Power- Limited Output Protection	Current (max. per output)	Fuse Rating	Main Fuse Rating	115VAC 60Hz Input Current	230VAC 50/60Hz Input Current	Agency Listings	UL Listings and File Numbers
VertiLine8	24VAC or 28VAC	5A	8	✓	_	ЗА	ЗА	104	1 []	0.04		UL 2044 UL Listed for Commercial CCTV Equipment.
VertiLine8D	24VAC or 28VAC	5A	8	_	✓	2.5A	_	10A	1.5A	0.8A		
VertiLine83	24VAC or 28VAC	10A	8	√	_	ЗА	ЗА	1 E A	15A 3A	1.5A		
VertiLine83D	24VAC or 28VAC	10A	8	ı	✓	2.5A	ı	ACI				

WARNING: To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture. This installation should be made by qualified service personnel and should conform to the National Electrical Code and all local codes.

- 2 - VertiLine8 Series Installation Guide

Installation Instructions:

- 1. Set the input voltage selector switch located on the left side of the VertiLine unit (facing front panel) for 115VAC or 230VAC operation (Fig. 1c, pg. 4).
- 2. Attach mounting brackets to VertiLine unit for rack or wall mount installation (Figs. 4-5, pg. 7). Affix rubber pads to VertiLine for shelf installation (Fig. 6, pg. 7).
- 3. Secure the unit in a rack, mount unit to a wall or place unit on a shelf as desired (unit should be spaced at least 3" from any video monitors). When installing the unit in a rack allow for one half of a U spacing above the unit for ventilation.
- 4. Plug the grounded AC line cord (included) into the IEC 320 connector of the VertiLine unit (Fig. 1g, pg. 4). Insert the plug end of the line cord into a grounded AC receptacle.
- 5. Set illuminated master power disconnect circuit breaker to the (ON) position (Fig. 3, pg. 6).
- 6. Select 24VAC or 28VAC power output for cameras 1-8 with the corresponding voltage adjustment switches (Fig. 1b, pg. 4).
- 7. Measure output voltage before connecting cameras. This helps avoiding potential damage. All terminals with common suffix (P) "1P, 2P ..." are the same polarity.
- 8. Set illuminated master power disconnect circuit breaker to the (OFF) position (Fig. 3, pg. 6).
- 9. Connect the power outputs of terminals marked [1P & 1N] to the power inputs of camera 1 (Fig. 2, pg. 5). Repeat this step for each additional camera (Outputs 2-8). After wiring is completed, insert terminal block into the corresponding connector and secure by tightening the screws.
- 10. Upon completion of wiring, set illuminated master power disconnect circuit breaker to the ON (RESET) position (*Fig. 3, pg. 6*).
- 11. The power LEDs (Green) on the faceplate for Outputs 1-8 will illuminate when AC power is present (Fig. 1a, pg. 4). If any of these LEDs are off, a loss of AC power output may be due to a blown fuse or a tripped PTC caused by a short circuit or overload condition. If all of the LEDs are OFF there may be a complete loss of supply power to the VertiLine unit, or the illuminated master power disconnect circuit breaker is in the OFF position, or the main fuse 1-8 is blown (Fig. 1d, pg. 4).*

To restore the power output for VertiLine8 or VertiLine83:

- 1- Switch corresponding output voltage switch to the OFF position (Fig. 1b, pg. 4).
- 2- Eliminate the trouble condition.
- 3- Replace the corresponding automotive blade fuse.*
- 4- Switch output voltage switch to the 24VAC or 28VAC position as desired (Fig. 1b. pg. 4).

To restore the power output for VertiLine8D or VertiLine83D:

- 1- Switch corresponding output voltage switch to the OFF position (Fig. 1b, pg. 4).
- 2- Eliminate the trouble condition.
- 3- Allow 1 minute for PTC to cool off.
- 4- Switch output voltage switch to the 24VAC or 28VAC position as desired (Fig. 1b, pg. 4).

*Note: Replace fuses with same type and rating:

Output fuses are rated @ 3A for all models. Main fuse ratings:


10A for VertiLine8 and VertiLine8D.

15A for VertiLine83 and VertiLine83D.



Automotive Blade Fuse

VertiLine8 Series Installation Guide - 3 -

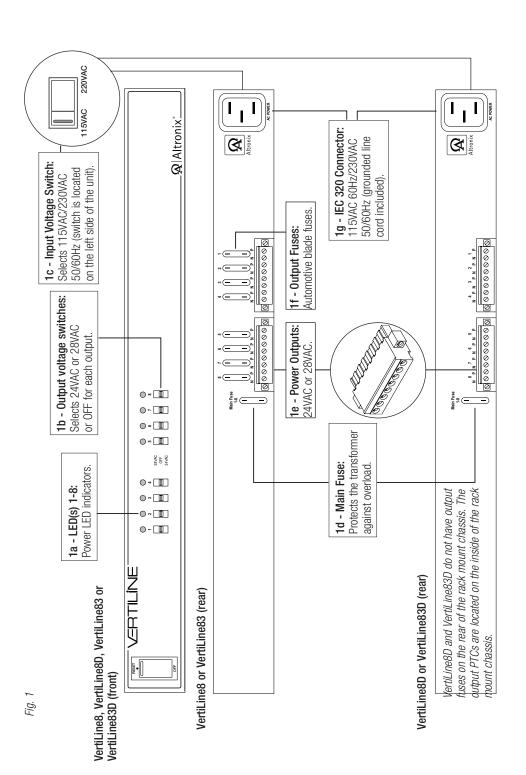

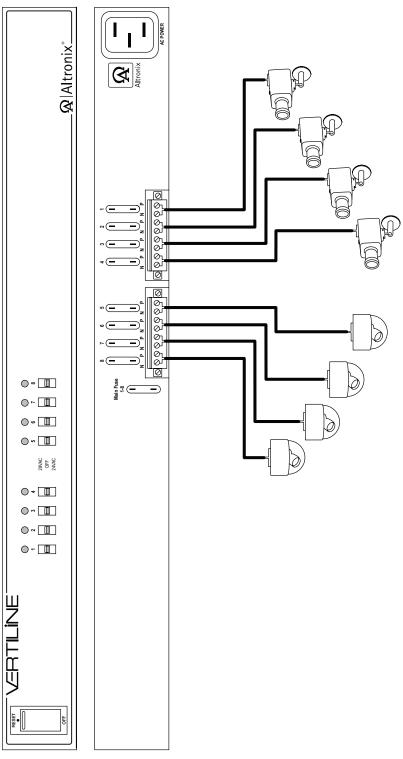


Fig. 2

VertiLine8 Series Installation Guide



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of an insulated DANGEROUS VOLTAGE within the product's enclosure that may be of sufficient magnitude to constitute an electric shock.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.




CAUTION: To reduce the risk of electric shock do not open enclosure. There are no user serviceable parts inside. Refer servicing to qualified service personnel.

1U EIA 19" Rack Mount Chassis Mechanical Drawing & Dimensions (H \times W \times D):

1.625" x 19.125" x 8.5" (41.3mm x 486mm x 216mm)

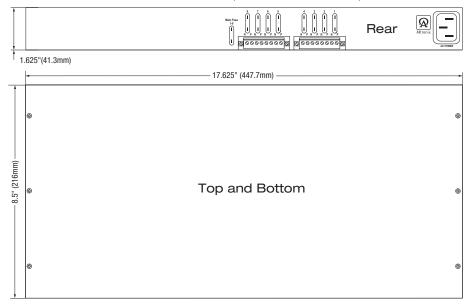

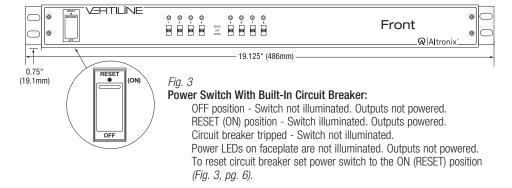


- 6 - VertiLine8 Series Installation Guide

Mounting Options:


Rack Mount Installation

- 1. Remove factory installed screws from both sides of the rack chassis (Fig. 4a).
- 2. Install mounting brackets (A) on the left and right side of rack chassis using the two (2) flat head screws (B) (included) (Fig. 4b).
- 3. Place unit into desired EIA 19" rack position and secure with mounting screws (not included) (Fig. 4c).

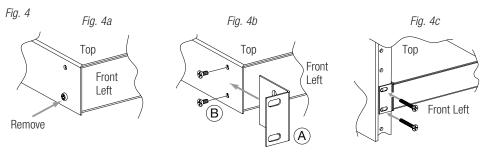


Wall Mount Installation


- Install mounting brackets (A) on the left and right side of rack chassis using two (2) flat head screws (B) (included) (Fig. 5a).
- Place unit at desired location and secure with mounting screws (not included) (Fig. 5b).
 Caution: It is necessary to make sure mounting screws are securely fastened to a beam when installing.

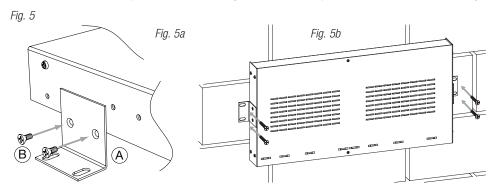

Shelf Installation

- 1. Position and affix rubber pads (C) (included) at each corner on the bottom of the unit (Fig. 6).
- 2. Place unit in desired location.

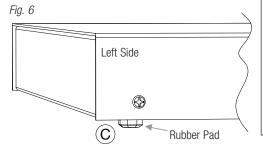

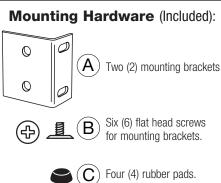

VertiLine8 Series Installation Guide - 7 -

Notes: