ALTV1224DC220 Series **CCTV** Power Supplies

Models Include:

ALTV1224DC220

- 12VDC or 24VDC @ 4A
- Eight (8) Fuse Protected Outputs.

ALTV1224DC1220

- 12VDC or 24VDC @ 4A.
- Sixteen (16) Fuse Protected Outputs.

ALTV1224DC2220

- 12VDC or 24VDC @ 6A.
- Sixteen (16) Fuse Protected Outputs.

Installation Guide

CE

Rev. 022505

Installing Company: _____ Service Rep. Name: ____

ALTV1224DCCB220

- 12VDC or 24VDC @ 4A
- Eight (8) PTC Protected Outputs.

ALTV1224DC1CB220

- 12VDC or 24VDC @ 4A.
- Sixteen (16) PTC Protected Outputs.

ALTV1224DC2CB220

- 12VDC or 24VDC @ 6A.
- Sixteen (16) PTC Protected Outputs.



More than just power.™

Address:

Phone #:

Overview:

Altronix ALTV1224DC220 Series DC CCTV power supplies are designed to power CCTV Cameras and accessories. Units provide 12VDC or 24VDC distributed via eight (8) or sixteen (16) fused or PTC protected outputs with a total of 4A or 6A continuous supply current.

Eight (8) or Sixteen (16) Output ALTV1224DC220 Reference Chart:

Altronix Model Number	Total Output Current (Power)	Number of Outputs	PTC Protected Auto-Resettable Outputs	Fuse Protected Outputs	Output Current (max per output)	220VAC 50/60Hz Input Current
ALTV1224DC220	- 4A	8	_	\checkmark	3.5A	0.9A
ALTV1224DCCB220			\checkmark	-	2.5A	
ALTV1224DC1220		- 16	—	\checkmark	3.5A	
ALTV1224DC1CB220			\checkmark	-	2.5A	
ALTV1224DC2220	6A	10	_	\checkmark	3.5A	1.5A
ALTV1224DC2CB220	DA		\checkmark	-	2.5A	T.3A

Specifications:

Input:

 Input 220VAC (working range 198VAC-256VAC), 50/60 Hz.

Output:

- Eight (8) or sixteen (16) fuse or PTC protected outputs.
- 12VDC or 24VDC.
- Outputs are rated @ 3.5A (fused) or 2.5A (PTC).
- Filtered and electronically regulated outputs.

Features:

- AC input and DC output LED indicators.
- Power ON/OFF switch.
- Unit maintains camera synchronization.
- Ease of installation saves time and eliminates costly labor.

Enclosure Dimensions (H x W x D approx.):

13.5" x 13" x 3.25" (342.9mm x 330.2mm x 82.6mm).

Installation Instructions:

- 1. Mount unit in the desired location. Mark and predrill holes in the wall to line up with the top two keyholes in the enclosure. Install two upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two upper screws; level and secure. Mark the position of the lower two holes. Remove the enclosure. Drill the lower holes and install two fasteners. Place the enclosure's upper keyholes over the two upper screws. Install the two lower screws and make sure to tighten all screws (*Enclosure Dimensions, pg. 8*). Secure enclosure to earth ground.
- 2. Slide switch to OFF position (Fig. 1, pg. 3, Fig. 2, pg. 4 or Fig. 3, pg. 5).
- 3. Set the unit to desired DC output voltage range by setting switch (SW1) on the power supply board to the appropriate position. Use trimpot to adjust voltage if necessary (*Fig. 1, pg. 3, Fig. 2, pg. 4 or Fig. 3, pg. 5*).
- Connect AC circuit (220VAC, 50/60Hz) as follows: Green branch wire connects to earth (safety) ground lug ⊕. Line and Neutral to the connector on power supply board marked [L, N] respectively (*Fig. 1, pg. 3, Fig. 2, pg. 4 or Fig. 3, pg. 5*).
- 5. Measure output voltage before connecting devices. This helps avoiding potential damage.
- 6. Connect each DC device to the output terminals 1 through 8 (*Fig. 1, pg. 3*) or terminals 1 through 16 (*Fig. 2, pg. 4 or Fig. 3, pg. 5*).

Note: Be careful to observe camera polarity.

7. When batteries are being used, the DC output voltage must be adjusted by turning the trim pot VR1 (*Fig. 1, pg. 3, Fig. 2, pg. 4 or Fig. 3, pg. 5*) clockwise to increase the output voltage to 13.7VDC for 12VDC operation and 27.1VDC for 24VDC operation.
Connect battery to theterminals marked L BAT ul (hattery leads included) (*Fig. 1, ng. 3, Fig. 2, ng. 4*)

Connect battery to theterminals marked [- BAT +] (battery leads included) (*Fig. 1, pg. 3, Fig. 2, pg. 4 or Fig. 3, pg. 5*). Use two (2) 12VDC batteries connected in series for 24VDC operation.

- 8. Slide switch to ON position (Fig. 1, pg. 3, Fig. 2, pg. 4 or Fig. 3, pg. 5).
- 9. Green LED on the PD8/PD8CB or PD16W/PD16WCB board will illuminate when power is present.
- 10. Upon completion of the wiring, secure enclosure door with screws (supplied).

ALTV1224DC/CB220 Terminal Identification: 01 \$127220 - Power Supply


Terminal Legend	Function/Description	
L, N	220VAC power mains connection.	
- DC +	12VDC or 24VDC @ 4A total continuous output.	
- BAT +	Stand-by battery connections. Maximum charge rate 0.5A.	

PD8/PD8CB - Power Distribution Module

Terminal Legend	Function/Description	
1P - 8P	Positive DC power outputs.	
1N - 8N	Negative DC power outputs.	

Fig. 1

CAUTION: De-energize unit prior to servicing. For continued protection against fire hazard replace fuse with the same type and rating. Do not expose unit to rain or moisture.

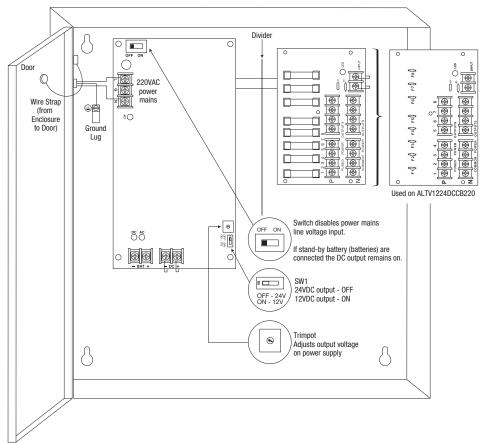

ALTV1224DC1/CB220 Terminal Identification:

OLS127 - Power Supply


Terminal Legend	Function/Description
L, N	220VAC power mains connection.
- DC +	12VDC or 24VDC @ 4A total continuous output.
- BAT +	Stand-by battery connections. Maximum charge rate 0.5A.

PD16W/PD16WCB - Power Distribution Module

Terminal Legend	Function/Description
1P - 16P	Positive DC power outputs.
1N - 16N	Negative DC power outputs.

Fig. 2

CAUTION: De-energize unit prior to servicing. For continued protection against fire hazard replace fuse with the same type and rating. Do not expose unit to rain or moisture.

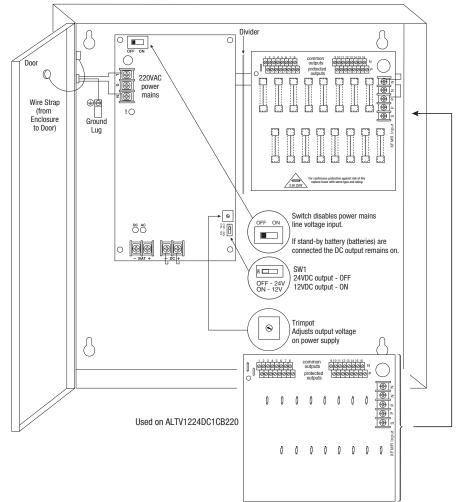

ALTV1224DC2/CB220 Terminal Identification: 01\$187220 - Power Supply


Terminal Legend	Function/Description	
L, N	220VAC power mains connection.	
- DC +	12VDC or 24VDC @ 6A total continuous output.	
- BAT +	Stand-by battery connections. Maximum charge rate 0.5A.	

PD16W/PD16WCB - Power Distribution Module

Terminal Legend	Function/Description
1P - 16P	Positive DC power outputs.
1N - 16N	Negative DC power outputs.

Fig. 3

CAUTION: De-energize unit prior to servicing. For continued protection against fire hazard replace fuse with the same type and rating. Do not expose unit to rain or moisture.

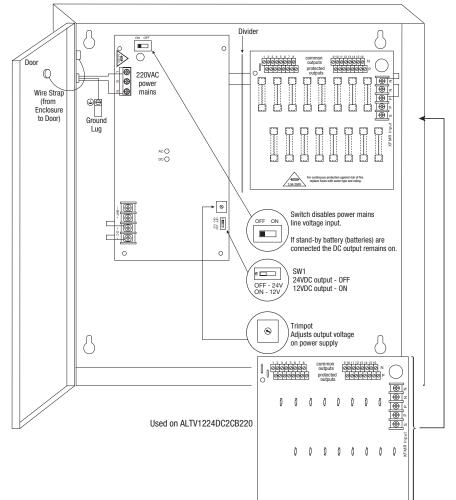

WARNING: To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture. This installation should be made by qualified service personnel and should conform to the National Electrical Code and all local codes.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of an insulated DANGEROUS VOLTAGE within the product's enclosure that may be of sufficient magnitude to constitute an electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.





CAUTION: To reduce the risk of electric shock do not open enclosure. There are no user serviceable parts inside. Refer servicing to qualified service personnel.

Notes:

Enclosure Dimensions (H x W x D):

13.5" x 13" x 3.25" (342.9mm x 330.2mm x 82.6mm)



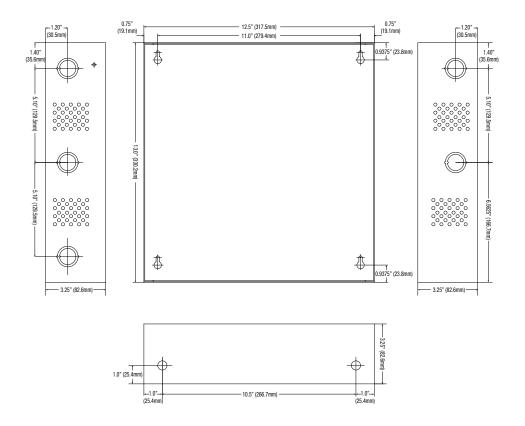

Altronix is not responsible for any typographical errors.

