



Access & Power Integration

## Altronix/Mercury Kits

### Models Include:

#### **T1MK1F4SAQ**

4 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove1 enclosure with TM1 Altronix/Mercury backplane
- One (1) eFlow4NB - Power Supply/Charger
- One (1) LINQ8ACM - Fused Networked Access Power Controller
- One (1) VR6 - Voltage Regulator

#### **T1MK1F4SADQ**

4 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove1 enclosure with TM1 Altronix/Mercury backplane
- One (1) eFlow4NB - Power Supply/Charger
- One (1) LINQ8ACMCB - PTC Networked Access Power Controller
- One (1) VR6 - Voltage Regulator

All components of these Trove kits are UL Listed sub-assemblies.

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

## Installation Guide



All registered trademarks are property of their respective owners.

Rev. 050322

Installing Company: \_\_\_\_\_ Service Rep. Name: \_\_\_\_\_

Address: \_\_\_\_\_ Phone #: \_\_\_\_\_



**More than just power.™**

## Overview:

Altronix Mercury kits are pre-assembled and consist of Trove1M1 enclosure/backplane with factory installed Altronix power supplies and sub-assemblies. These kits also accommodate various combinations of Mercury boards for up to four (4) doors in a single enclosure.

## Configuration Chart:


Altronix Model Number	120VAC 60Hz Input Current (A)	Power Supply Board Input Fuse Rating	Power Supply Board Battery Fuse Rating	Nominal DC Output Voltage		Maximum Supply Current for Main and Aux. Outputs on Power Supply board and LINQ8ACM(CB) Access Power Controller's outputs (A)	Fail-Safe/ Fail-Secure Outputs	Current Per LINQ8ACM(CB) Output (A)	LINQ8ACM(CB) Board Input Fuse (PTC) Rating	LINQ8ACM(CB) Board Output Fuse (PTC) Rating
				[DC]	[Aux]					
				24VDC Output Range (V)	24VDC Output Range (V)					
T1MK1F4SAQ	3.5	5A/ 250V	7.5A/ 32V	20.28-26.4	20.28-26.4	24VDC @ 3.6A	8	2.5	15A/ 32V	3A/ 32V
T1MK1F4SADQ	3.5	5A/ 250V	7.5A/ 32V	20.28-26.4	20.28-26.4	24VDC @ 3.6A	8	2.0	9A	2.5A

## Installation Instructions:




Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

1. Remove backplane from enclosure. Do not discard hardware.
2. Mark and predrill holes in the wall to line up with the top two (2) keyholes in the enclosure. Install two upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two upper screws; level and secure. Mark the position of the lower two holes. Remove the enclosure. Drill the lower holes and install the two fasteners. Place the enclosure's upper keyholes over the three upper screws. Install the two lower screws and make sure to tighten all screws.
3. Mount included UL Listed tamper switch (Altronix Model T112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (*Fig. 1, pg. 2*). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
4. Position Mercury access controller modules over corresponding spacers and depress onto snap on spacers, *Fig. 2, pg. 3*
5. Refer to the *eFlow Power Supply/Charger Installation Guide* for eFlow4NB, and corresponding Sub-Assembly Installation Guide for LINQ8ACM(CB) and VR6 for further installation instructions.
6. Mount backplane to enclosure with hardware.

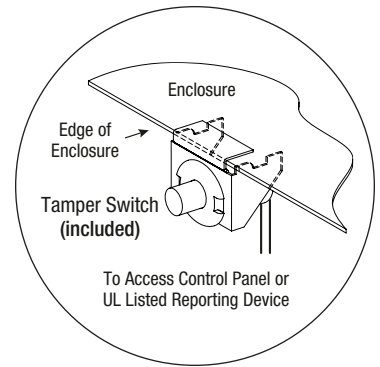Fig. 1

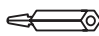

## Hardware:

	Snap On Spacer		5/16" Pan Head Screw		Lock Nut
--	----------------	---	----------------------	---	----------

## T1MK1F4A(D)Q: Configuration of Mercury Boards:

1. Fasten snap on spacers onto metal pems configuration (A), (B), (C) or (D) of backplane depending on the access controller (Fig. 2, pg. 3).
2. Position access controller module over corresponding spacers and depress onto snap on spacers (Fig. 2a, pg. 3).
3. Mount backplane to enclosure with hardware.

### Access Controller Position Chart for the Following Models:

Mercury Access Controller	Pem Mounting
EP1502, LP1502, MR52, MR16IN, MR16OUT	(A)
EP1501, LP1501, MR51e, MR62e	(B)
MR50	(C)
EP2500, LP2500, MUX8	(D)

Fig. 2



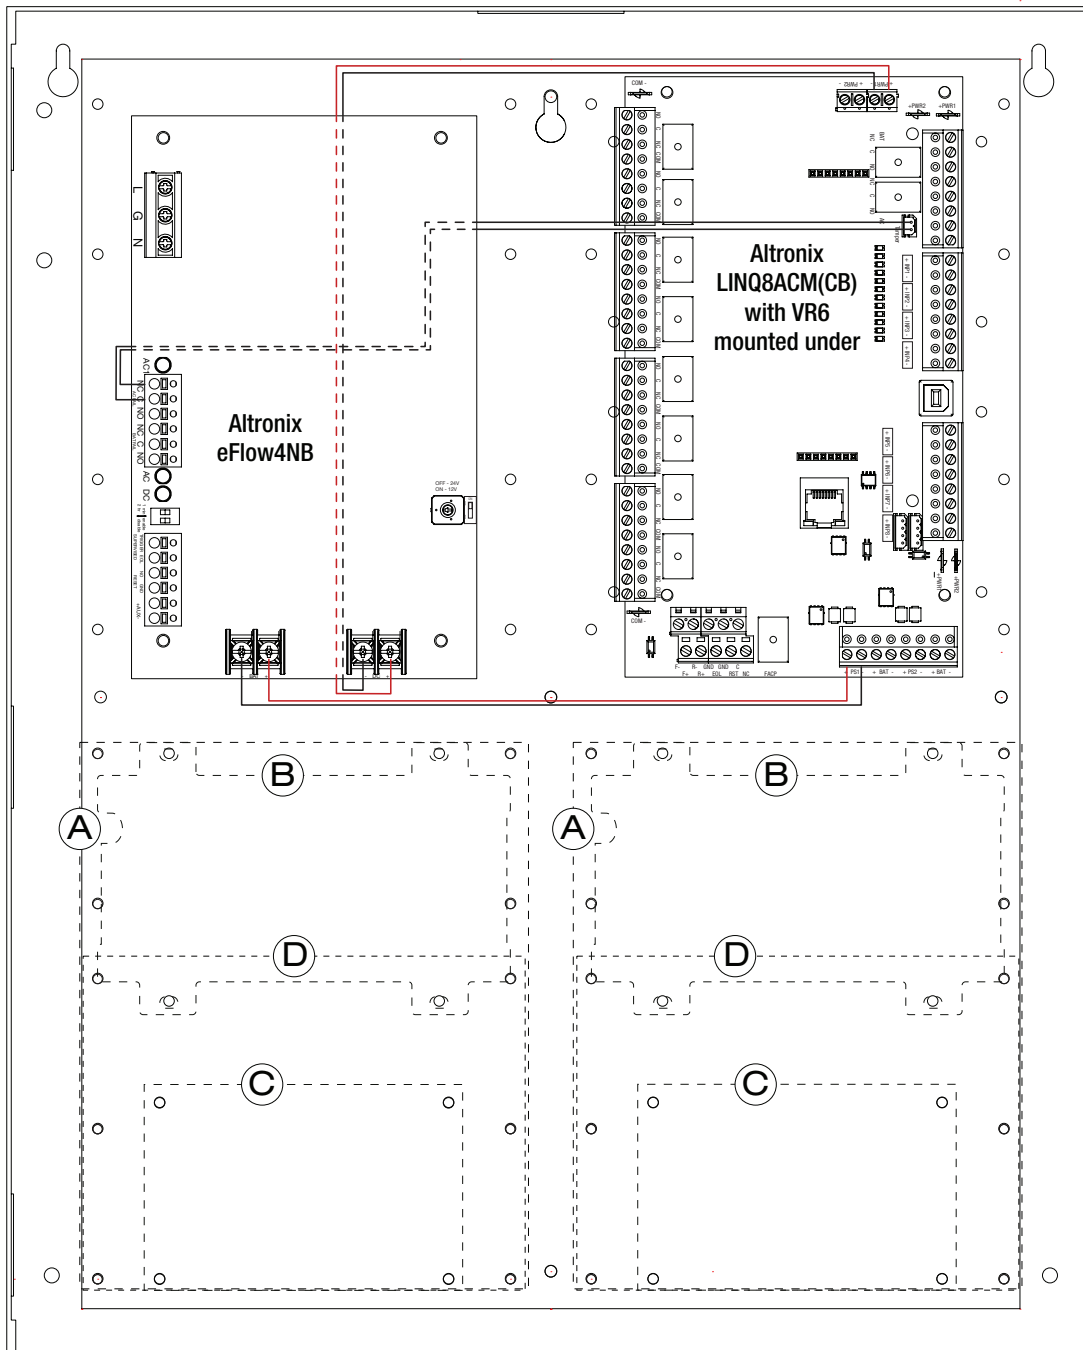


Fig. 2a

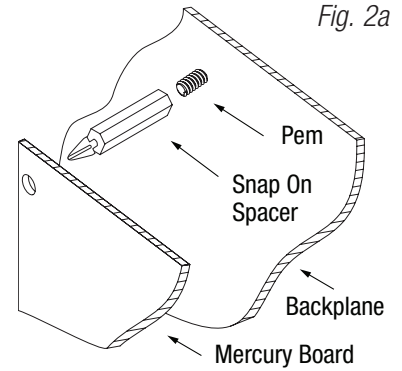

## Trove1 Enclosure Dimensions (H x W x D approximate):

18" x 14.5" x 4.625" (457mm x 368mm x 118mm)

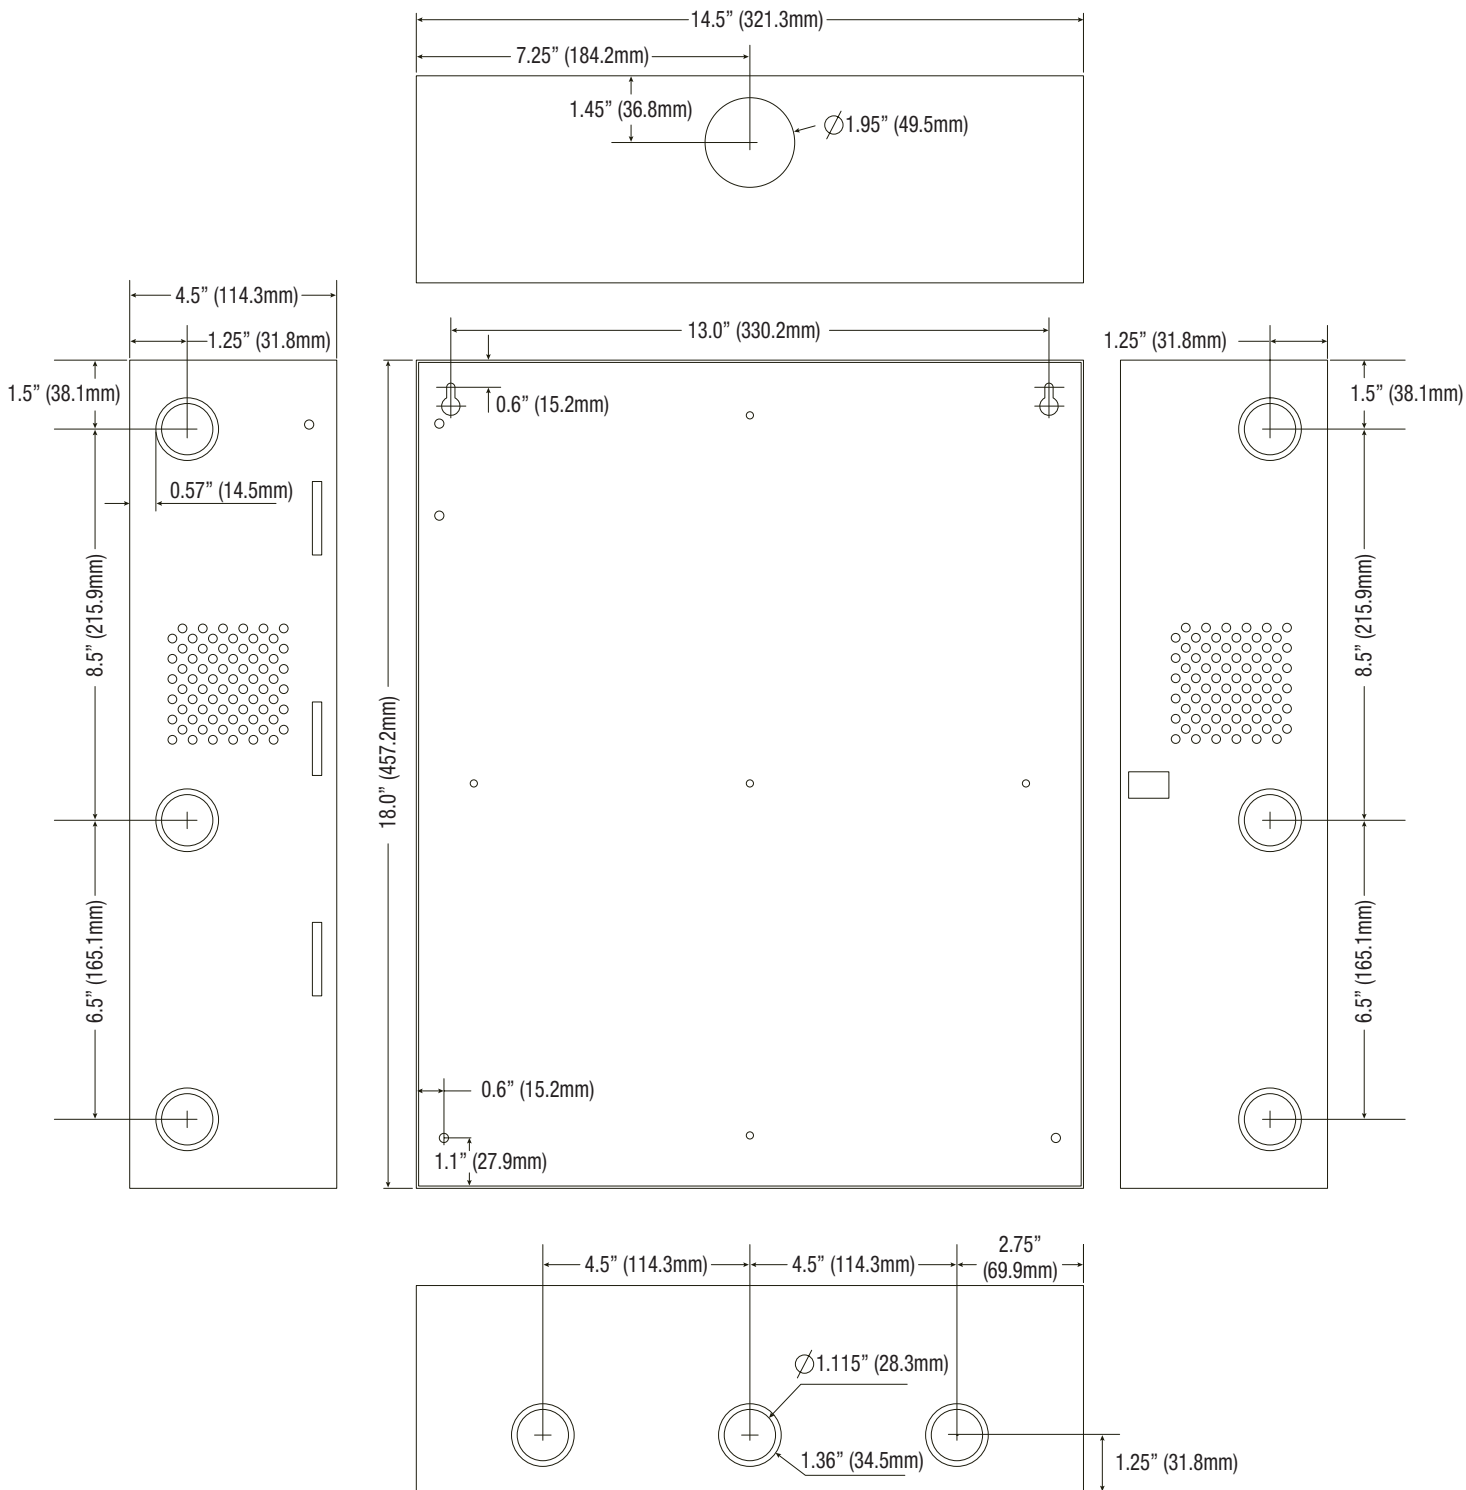

Altronix is not responsible for any typographical errors. Product specifications are subject to change without notice.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056  
 website: [www.altronix.com](http://www.altronix.com) | e-mail: [info@altronix.com](mailto:info@altronix.com) | Lifetime Warranty  
 IIT1MK1F4A(D)Q

J01X



T1MK1F4A(D)Q Installation Guide