



Access & Power Integration

## Altronix/Mercury Networked Kits

### Models Include:

#### **T2MK3F8AQ**

8 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove2 enclosure with TM2 Altronix/Mercury backplane
- One (1) eFlow6NB - Power Supply/Charger
- One (1) LINQ8ACM - Networked Fuse Protected Access Power Controller
- One (1) PDS8 - Fuse Protected Dual Input Power Distribution Module
- One (1) VR6 - Voltage Regulator

#### **T2MK3F8ADQ**

8 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove2 enclosure with TM2 Altronix/Mercury backplane
- One (1) eFlow6NB - Power Supply/Charger
- One (1) LINQ8ACMCB - Networked PTC Protected Access Power Controller
- One (1) PDS8CB - PTC Protected Dual Input Power Distribution Module
- One (1) VR6 - Voltage Regulator

All components of these Trove kits are UL Listed sub-assemblies.

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

## Installation Guide



All registered trademarks are property of their respective owners.

Rev. 062323

Installing Company: \_\_\_\_\_ Service Rep. Name: \_\_\_\_\_

Address: \_\_\_\_\_ Phone #: \_\_\_\_\_



**More than just power.™**

## Overview:

Altronix T2MK3F8A(D)Q Trove Mercury kit is pre-assembled and consists of Trove2M2 enclosure with factory installed Altronix power supply/charger and sub-assemblies. T2MK3F8A(D)Q kit also accommodates various combinations of Mercury boards for up to eight (8) doors in a single enclosure.

## Configuration Chart:


Altronix Model Number	120VAC 60Hz Input Current (A)	Power Supply Board Input Fuse Rating	Power Supply Board Battery Fuse Rating	Nominal DC Output Voltage		Maximum Supply Current for Main and Aux. Outputs on Power Supply board, LINQ8ACM(CB) Access Power Controller(s) and PDS8(CB) outputs	Fail-Safe/Fail-Secure or Dry Form "C" Outputs	Additional Fuse (PTC) Protected Outputs	Current Per LINQ8ACM(CB) and PDS8(CB) Output (A)	LINQ8ACM(CB) Board Input Fuse (PTC) Rating	PDS8(CB) Board Input Fuse (PTC) Rating	LINQ8ACM(CB) and PDS8(CB) Board Output Fuse (PTC) Rating
				[DC]	[Aux]							
T2MK3F8AQ	3.5	5A/250V	10A/32V	20.17-26.4	20.28-26.4	24VDC @ 5.8A	8	8	2.5	15A/32V	10A/32V	3A/32V
T2MK3F8ADQ									2.0	9A	9A	2.5A

## Installation Instructions:




Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

1. Remove backplane from enclosure. Do not discard hardware.
2. Mark and predrill holes in the wall to line up with the top two/three keyholes in the enclosure. Install two/three upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two/three upper screws; level and secure. Mark the position of the lower three holes. Remove the enclosure. Drill the lower holes and install the three fasteners. Place the enclosure's upper keyholes over the two/three upper screws. Install the three lower screws and make sure to tighten all screws.
3. Mount included UL Listed tamper switch (Altronix Model TS112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (*Fig. 1, pg. 2*). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
4. Mount Mercury modules to backplane(s), refer to *page 3*.
5. Refer to the *eFlow Power Supply/Charger Installation Guide* for eFlow6NB and corresponding *Sub-Assembly Installation Guides* for LINQ8ACM(CB), PDS8(CB) and VR6 for further installation instructions.

Fig. 1

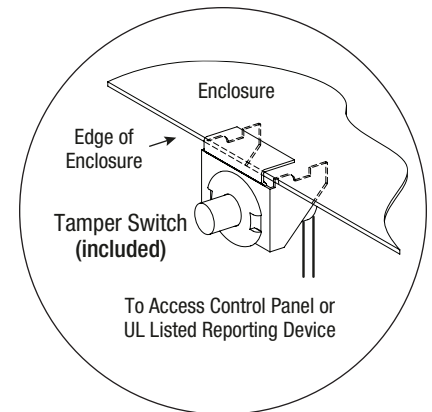

## Hardware:

		
Snap On Spacer	5/16" Pan Head Screw	Lock Nut

**T2MK3F8A(D)Q: Configuration of Mercury Boards:**

- 1. Fasten snap on spacers onto metal pems configuration (A), (B), (C) or (D) of backplane depending on the access controller (Fig. 2, pg. 3).
- 2. Position access controller module over corresponding spacers and depress onto snap on spacers (Fig. 2a, pg. 3).
- 3. Mount backplane to enclosure with hardware.

**Access Controller Position Chart for the Following Models:**

Mercury Access Controller	Pem Mounting
EP1502, MR52, MR16IN, MR16OUT	(A)
EP2500, MUX8	(B)
EP1501, MR51e	(C)
MR50	(D)

Fig. 2



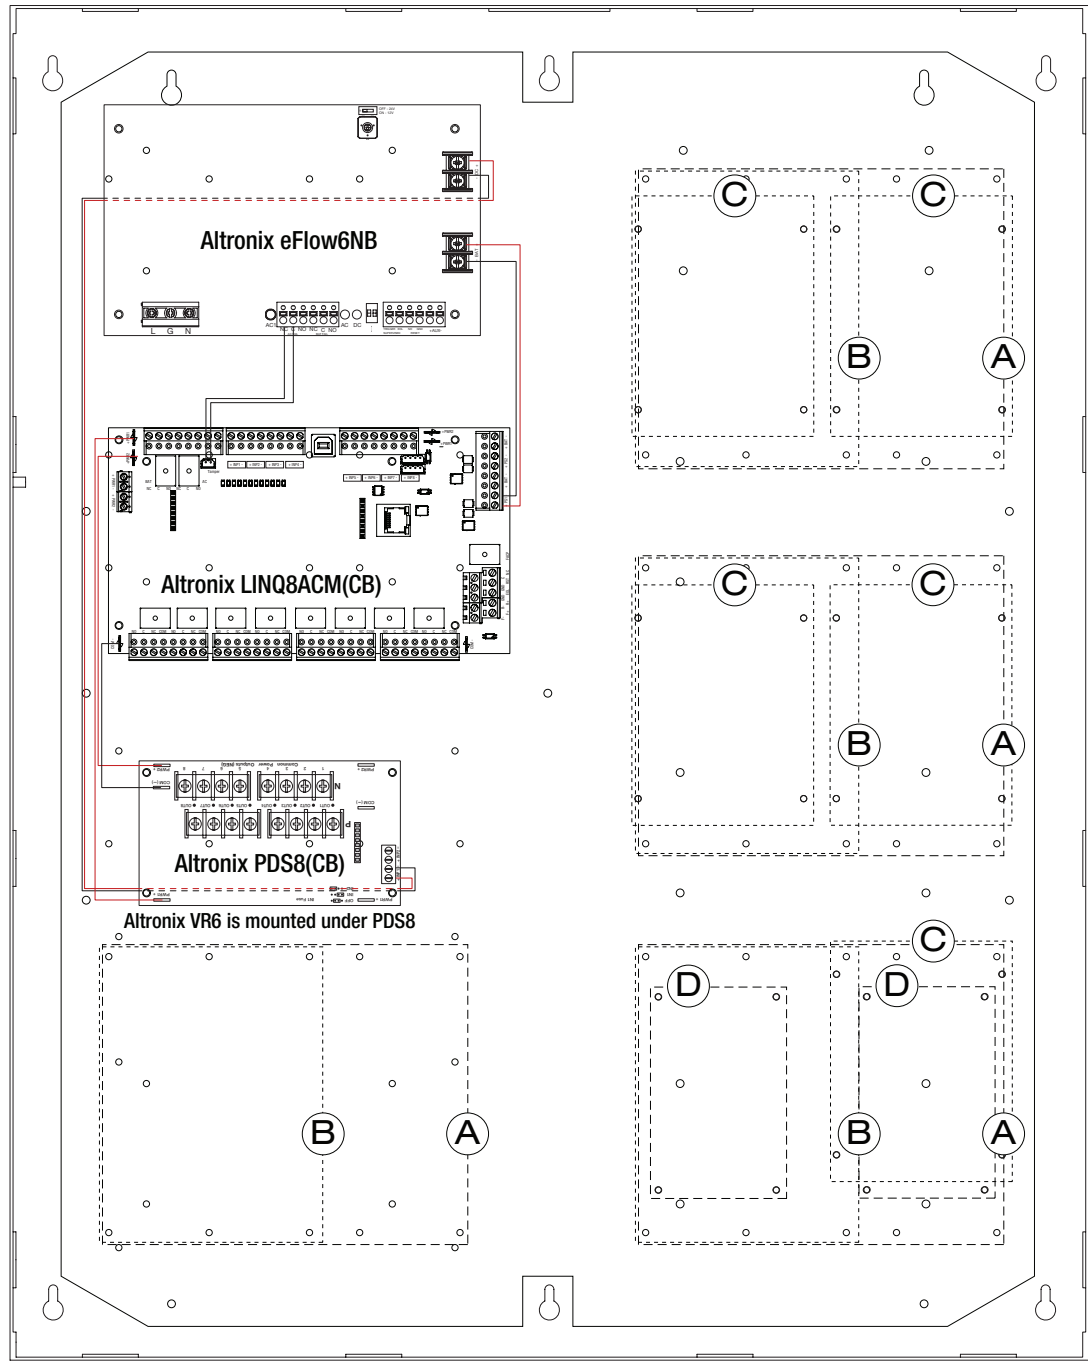


Fig. 2a

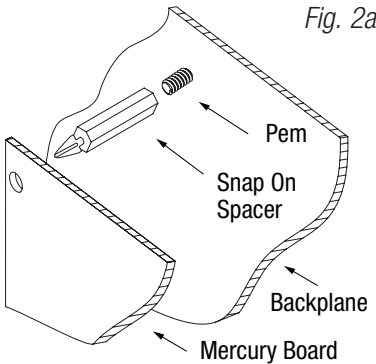

## Trove2 Enclosure Dimensions (H x W x D approximate):

27.25" x 21.75" x 6.5" (692.2mm x 552.5mm x 165.1mm)

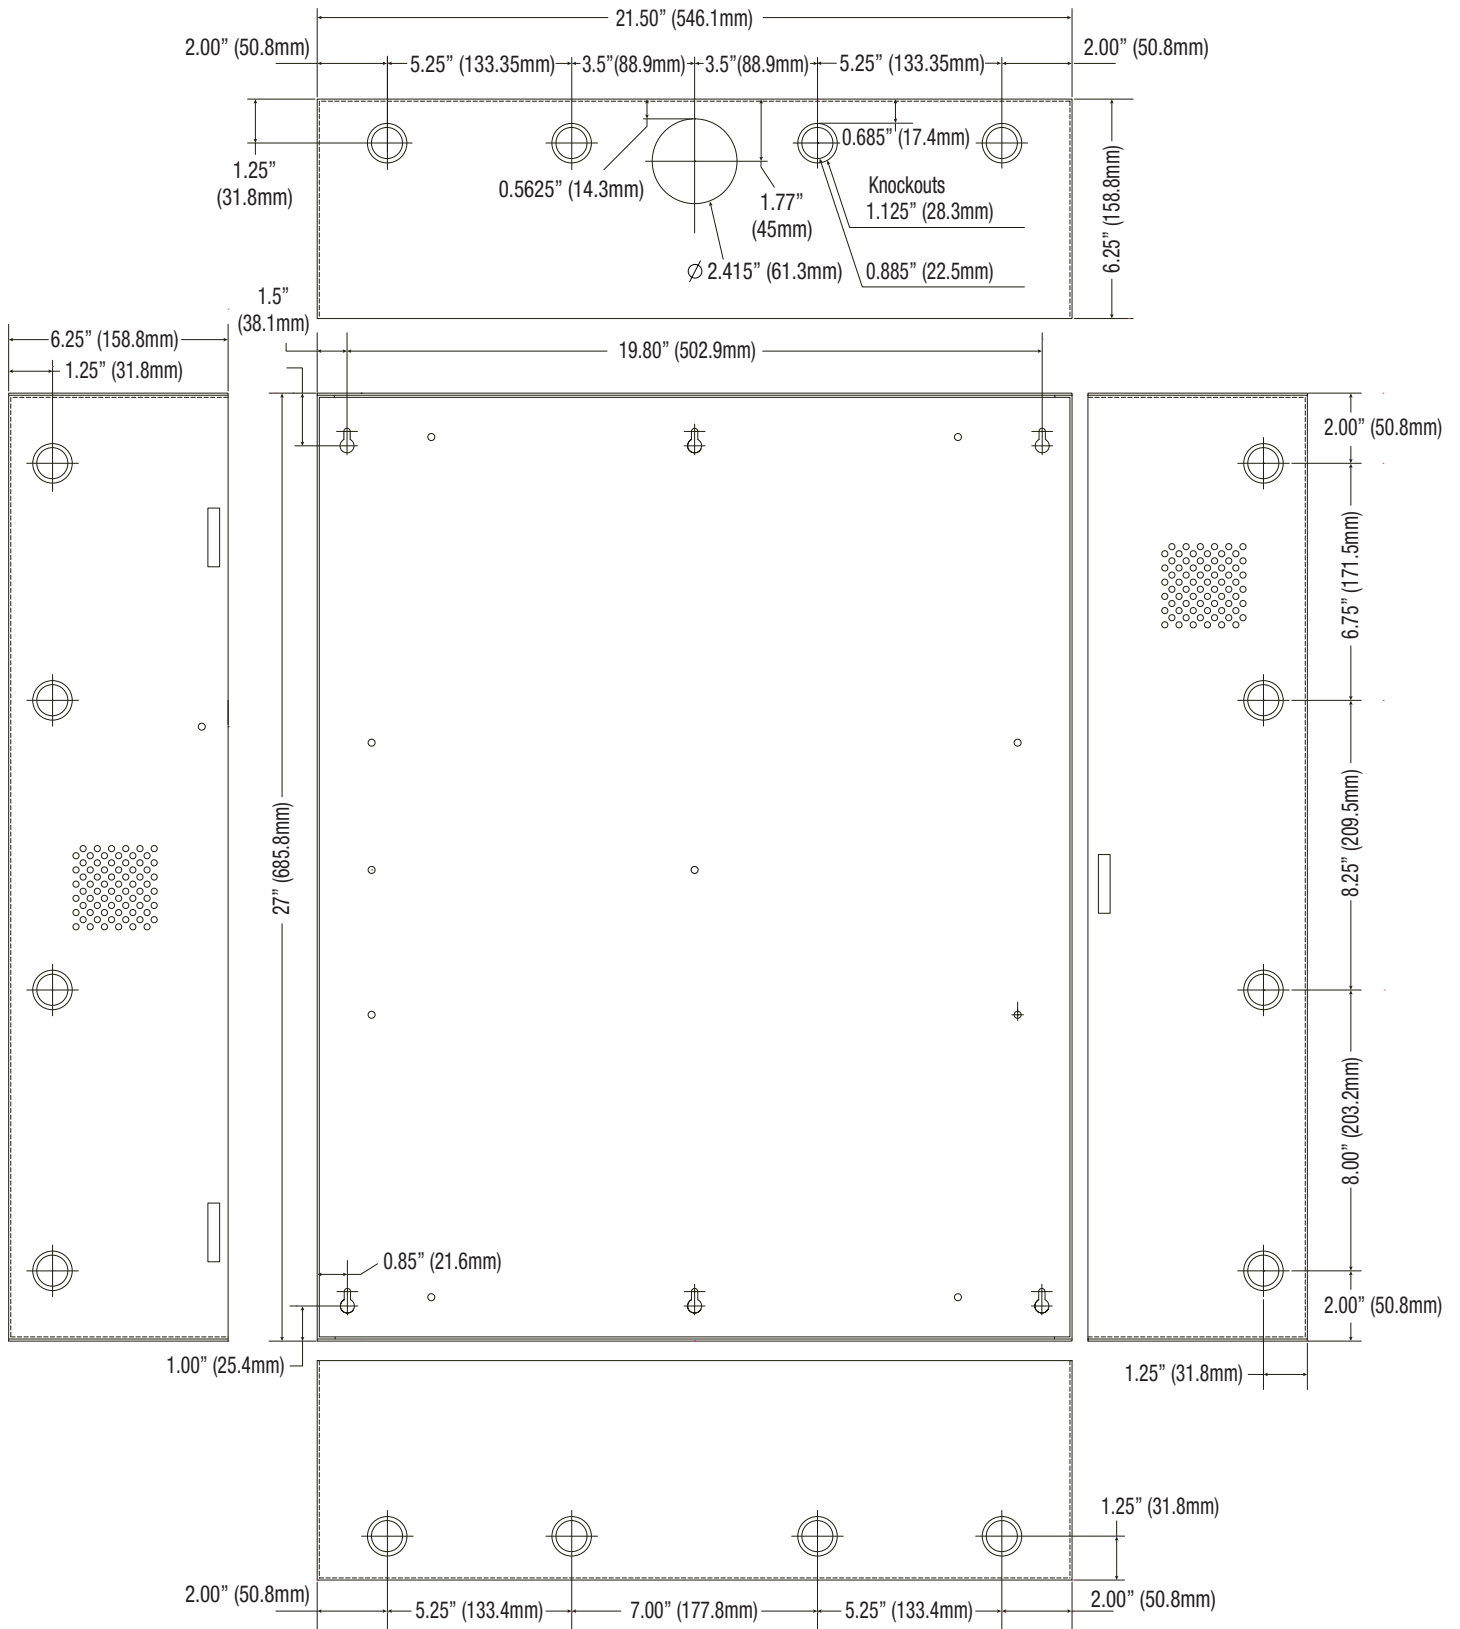

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056  
 web site: [www.altronix.com](http://www.altronix.com) | e-mail: [info@altronix.com](mailto:info@altronix.com) | Lifetime Warranty  
 IT2MK3F8A(D)Q

F23W



T2MK3F8A(D)Q Installation Guide