

Altronix/Kisi Kits

Models Include:

T1KE3F4V

4 Door Kit with Fused Outputs Fully assembled kit includes:

- Trove1 enclosure with TDR1 backplane
- One (1) eFlow6NBV Power Supply/Charger
- One (1) ACM4 Fused Access Power Controller

T1KE3F8V

8 Door Kit with Fused Outputs Fully assembled kit includes:

- Trove1 enclosure with TDR1 backplane
- One (1) eFlow6NBV Power Supply/Charger
- Two (2) ACM4 Fused Access Power Controllers

T2KE33F16V

16 Door Kit with Fused Outputs Fully assembled kit includes:

- Trove2 enclosure with TDR2 backplane
- Two (2) eFlow6NBV Power Supply/Charger
- Two (2) ACM8 Fused Access Power Controllers

T1KE3F4DV

4 Door Kit with PTC Outputs Fully assembled kit includes:

- Trove1 enclosure with TDR1 backplane
- One (1) eFlow6NBV Power Supply/Charger
- One (1) ACM4CB PTC Access Power Controller

T1KE3F8DV

8 Door Kit with PTC Outputs Fully assembled kit includes:

- Trove1 enclosure with TDR1 backplane
- One (1) eFlow6NBV Power Supply/Charger
- Two (2) ACM4CB PTC Access Power Controllers

T2KE33F16DV

16 Door Kit with PTC Outputs Fully assembled kit includes:

- Trove2 enclosure with TDR2 backplane
- Two (2) eFlow6NBV Power Supply/Charger
- Two (2) ACM8CB PTC Access Power Controllers

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

Installation Guide $C \in \mathcal{E}$

All registered trademarks are property of their respective owners.

Dov. 102024



| NEV. 102924 | | |
|---------------------|--------------------|----------|
| Installing Company: | Service Rep. Name: | |
| • , , – | , | |
| Address: | | Phone #: |
| | | |

Overview:

Altronix Trove Kisi kits are pre-assembled and consist of Trove1DR1 or Trove2DR2 enclosure/backplane with factory installed Altronix power supply/charger(s) and sub-assemblies. Trove Kisi kits also accommodates up to four (4) Kisi Pro Controllers for up to sixteen (16) doors in a single enclosure.

Configuration Chart:

| | 220VAC 60Hz | Power Supply Board | Power Supply Board | Maximum Supply Current for Main and Aux. Outputs on Power Supply | Nominal DC Output Voltage | | | ACM4(CB)/ ACM8(CB) | ACM4(CB)/ ACM8(CB) |
|-----------------------------|-------------------------|--------------------------|---------------------------|---|------------------------------|--------------------------|--------------------------------------|-------------------------|-------------------------|
| | | | | | [DC] | [Aux] | ux] | Board Input | Board Output |
| Altronix Model Number | Input Current (A) | Input Fuse Rating | Battery Fuse Rating | board(s) and ACM4(CB) or ACM8(CB) Access Power Controllers' outputs | Output Range (VDC) | Output Range (VDC) | Fail-Safe/ Fail-Secure Outputs | Fuse (PTC) Rating | Fuse (PTC) Rating |
| T1KE3F4V | 2.5 | 5A/ 250V | 10A/ 32V | 24VDC @ 5.7A | 20.17- 26.4 | 20.28-26.4 | 4 | 10A/32V | 3A/32V |
| T1KE3F4DV | | | | | | | | 9A | 2.5A |
| T1KE3F8V | | | | | | | 8 | 10A/32V | 3A/32V |
| T1KE3F8DV | | | | | | | | 9A | 2.5A |
| T2KE33F16V | | | | | | | 16 | 10A/250V | 3.5A/250V |
| T2KE33F16DV | | | | | | | | | 2.5A |

Installation Instructions:

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

- 1. Remove backplane from enclosure. Do not discard hardware.
- 2. Mark and predrill holes in the wall to line up with the top two/three keyholes in the enclosure. Install two/three upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two/three upper screws, level and secure. Mark the position of the lower two/three holes. Remove the enclosure. Drill the lower holes and install the two/three fasteners. Place the enclosure's upper keyholes over the two/three upper screws. Install the two/three lower screws and make sure to tighten all screws refer to pages 6-7.
- 3. Mount included UL Listed tamper switch (Altronix Model TS112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure, approximately 2" from the right side (Fig. 1, pg. 2). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
- 4. Mount Kisi Pro Controllers to TDR1 or TDR2 backplane, refer to pages 3-5.
- 5. Refer to the *eFlow Power Supply/Charger Installation Guide* for eFlow6NBV and corresponding *Sub-Assembly Installation Guides* for ACM4(CB) and ACM8(CB) for further installation instructions.

Hardware:



Enclosure
Edge of Enclosure
Tamper Switch (included)
To Access Control Panel or UL Listed Reporting Device

- 2 -

T1KE3F4V and T1KE3F4DV: Configuration of Kisi Pro Controllers:

- 1. Fasten mounting magnets (provided) to Kisi Pro Controllers with screws and spacers (provided) using the controllers' mounting holes (Fig. 2, pg. 3).
- 2. Attach mounting magnets to TDR1 in the approximate position as shown below (Fig. 2a, pg. 3).

Note: Kisi Pro Controllers should be properly oriented.


Please make sure that they are mounted correctly, as shown in Fig. 2 below.


3. Fasten TDR1 backplane to Trove1 enclosure utilizing hardware (provided).

Access Controller Position Chart for the Following Models:

| Kisi | Pem Mounting |
|----------------|--------------|
| Pro Controller | (A) |

Fig. 2 - T1KE3F4(D)V Configuration

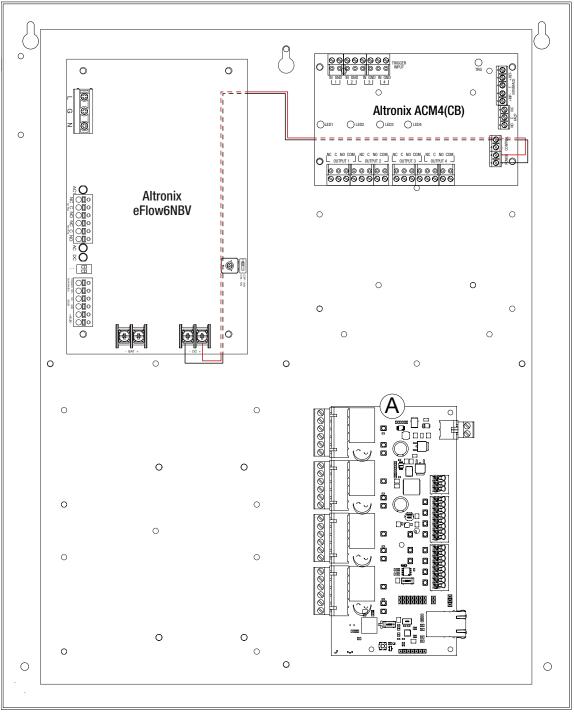

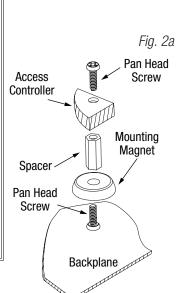

Trove KE eFlow V Kits Installation Guide - 3 -

T1KE3F8V and T1KE3F8DV: Configuration of Kisi Pro Controllers:

- 1. Fasten mounting magnets (provided) to Kisi Pro Controllers with screws and spacers (provided) using the controllers' mounting holes (Fig. 3, pg. 4).
- 2. Attach mounting magnets to TDR1 in the approximate position as shown below (Fig. 3a, pg. 4).

Note: Kisi Pro Controllers should be properly oriented.


Please make sure that they are mounted correctly, as shown in Fig. 3 below.


3. Fasten TDR1 backplane to Trove1 enclosure utilizing hardware (provided).

Access Controller Position Chart for the Following Models:

| Kisi | Pem Mounting |
|----------------|--------------|
| Pro Controller | (A) |

Fig. 3 - T1KE3F8(D)V Configuration

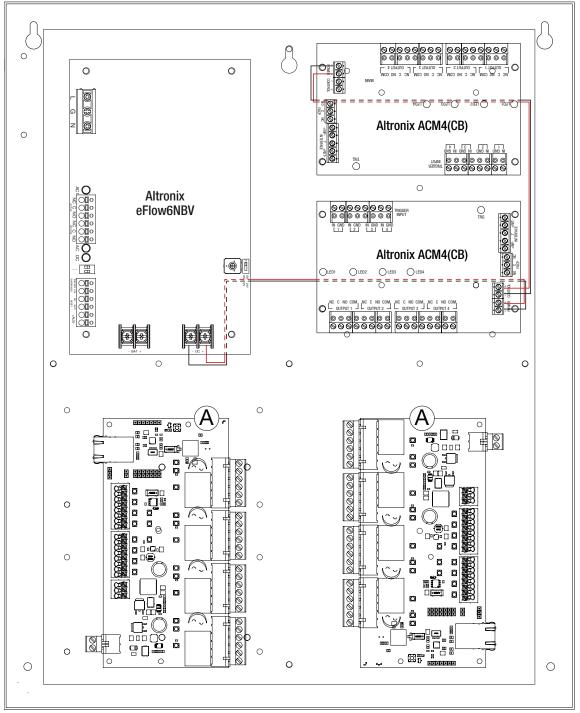

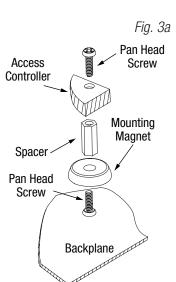

Trove KE eFlow V Kits Installation Guide

T2KE33F16V and T2KE33F16DV: Configuration of Kisi Pro Controllers:

- 1. Fasten mounting magnets (provided) to Kisi Pro Controllers with screws and spacers (provided) using the controllers' mounting holes (Fig. 4, pg. 5).
- 2. Attach mounting magnets to TDR2 in the approximate position as shown below (Fig. 4a, pg. 5).

Note: Kisi Pro Controllers should be properly oriented.


Please make sure that they are mounted correctly, as shown in Fig. 4 below.


3. Fasten TDR2 backplane to Trove2 enclosure utilizing hardware (provided).

Access Controller Position Chart for the Following Models:

| Kisi | Pem Mounting |
|----------------|--------------|
| Pro Controller | (A) |

Fig. 4 - T2KE33F16(D)V Configuration

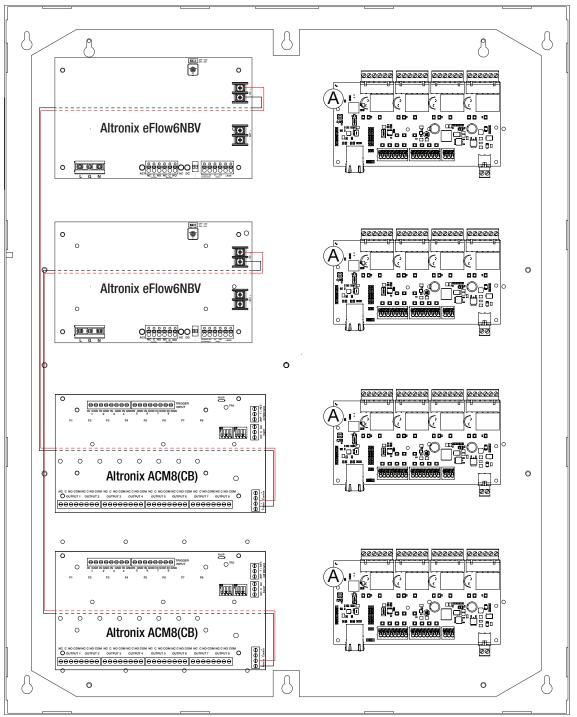


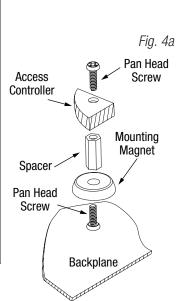

Trove KE eFlow V Kits Installation Guide



eFlow Power Supply/Chargers can be Controlled and Monitored while Reporting Power/Diagnostics from Anywhere over the Network...

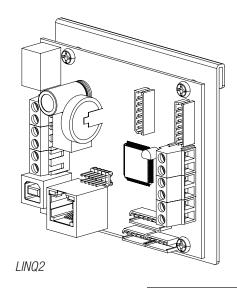

LINQ


LINQ2 - Network Communication Module

LINQ2 provides remote IP access to real-time data from eFlow power supply/chargers to help keep systems up and running at optimal levels. It facilitates fast and easy installation and set-up, minimizes system downtime, and eliminates unnecessary service calls, which helps reduce Total Cost of Ownership (TCO) - as well as creating a new source of Recurring Monthly Revenue (RMR).

Features:

- UL Listed in the U.S. and Canada.
- Local or remote control of up to (2) two Altronix eFlow power output(s) via LAN and/or WAN.
- Monitor real time diagnostics: DC output voltage, output current, AC & battery status/service, input trigger state change, output state change and unit temperature.
- Access control and user managment: Restrict read/write, Restrict users to specific resources
- Two (2) integral network controlled Form "C" Relays.
- Three (3) programmable input triggers: Control relays and power supplies via external hardware sources.
- Email and Windows Dashboard notifications
- Event log tracks history.
- Secure Socket Layer (SSL).
- Programmable via USB or web browser includes operating software and 6 ft. USB cable.


LINQ2 Mounts Inside any Trove Enclosure

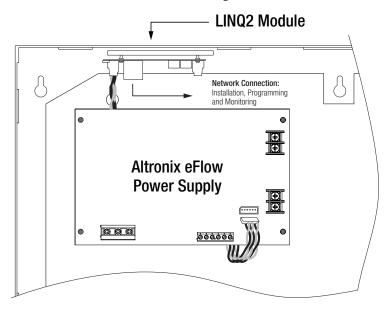

- 6 - Trove KE eFlow V Kits Installation Guide

T1KE3F4(D)V and T1KE3F8(D)V Enclosure Dimensions (H x W x D approximate):

18" x 14.5" x 4.625" (457mm x 368mm x 118mm)

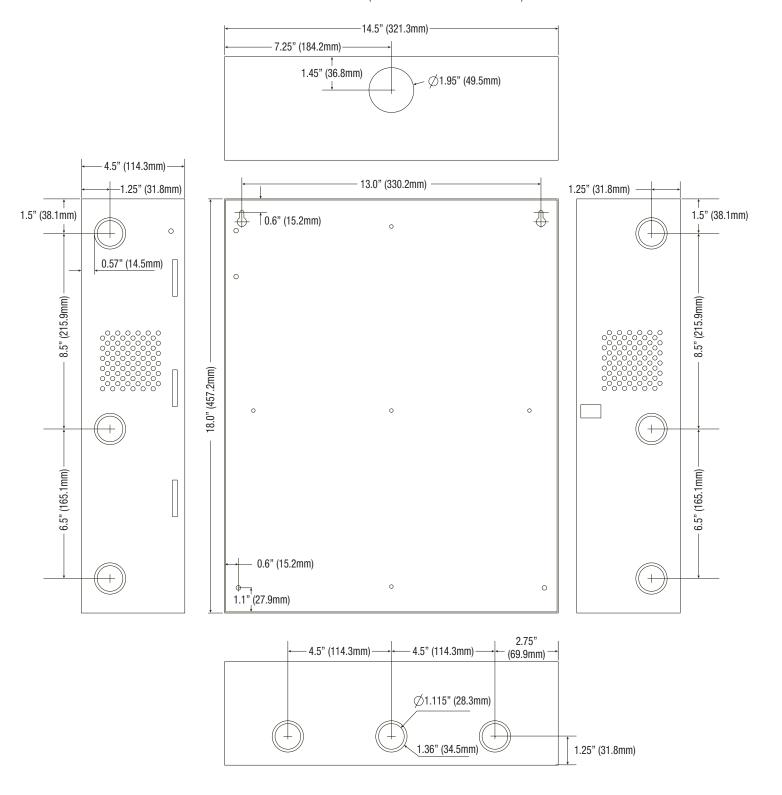

Trove KE eFlow V Kits Installation Guide - 7 -

T2KE33F16(D)V Enclosure Dimensions (H x W x D approximate):

27.25" x 21.5" x 6.5" (692.2mm x 552.5mm x 165.1mm)

