

TROVE™

Access & Power Integration

Altronix/Lenel-S2 (S2 Security Platform) Kits

Models Include:

T2SSK7F8

8 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove2 enclosure with TSS2 Altronix/Lenel-S2 (S2 Security Platform) backplane
- One (1) eFlow104NB - Power Supply/Charger
- One (1) ACM8 - Fused Access Power Controller
- One (1) VR6 - Voltage Regulator
- One (1) PDS8 - Dual Input Fused Power Distribution Module
- One (1) RSB1 - Rocker Switch Bracket with One (1) Rocker Switch
(Not evaluated by UL)

T2SSK75F14

14 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove2 enclosure with TSS2 Altronix/Lenel-S2 (S2 Security Platform) backplane
- One (1) eFlow104NB - Power Supply/Charger
- One (1) eFlow102NB - Power Supply/Charger
- Two (2) ACM8 - Fused Access Power Controllers
- Two (2) PD8UL - Fused Power Distribution Modules
- One (1) RSB2 - Rocker Switch Bracket with Two (2) Rocker Switches
(Not evaluated by UL)

T3SSK75F28

28 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove3 enclosure with TSS3 Altronix/Lenel-S2 (S2 Security Platform) backplane
- One (1) eFlow104NB - Power Supply/Charger
- One (1) eFlow102NB - Power Supply/Charger
- Three (3) ACM8 - Fused Access Power Controllers
- One (1) ACM4 - Fused Access Power Controller
- Two (2) PD16W - Fused Power Distribution Modules
- One (1) RSB2 - Rocker Switch Bracket with Two (2) Rocker Switches
(Not evaluated by UL)

T2SSK7F8D

8 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove2 enclosure with TSS2 Altronix/Lenel-S2 (S2 Security Platform) backplane
- One (1) eFlow104NB - Power Supply/Charger
- One (1) ACM8CB - PTC Access Power Controller
- One (1) VR6 - Voltage Regulator
- One (1) PDS8CB - Dual Input PTC Power Distribution Module
- One (1) RSB1 - Rocker Switch Bracket with One (1) Rocker Switch
(Not evaluated by UL)

T2SSK75F14D

14 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove2 enclosure with TSS2 Altronix/Lenel-S2 (S2 Security Platform) backplane
- One (1) eFlow104NB - Power Supply/Charger
- One (1) eFlow102NB - Power Supply/Charger
- Two (2) ACM8CB - PTC Access Power Controllers
- Two (2) PD8ULCB - PTC Power Distribution Modules
- One (1) RSB2 - Rocker Switch Bracket with Two (2) Rocker Switches
(Not evaluated by UL)

T3SSK75F28D

28 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove3 enclosure with TSS3 Altronix/Lenel-S2 (S2 Security Platform) backplane
- One (1) eFlow104NB - Power Supply/Charger
- One (1) eFlow102NB - Power Supply/Charger
- Three (3) ACM8CB - PTC Access Power Controllers
- One (1) ACM4CB - PTC Access Power Controller
- Two (2) PD16WCB - PTC Power Distribution Modules
- One (1) RSB2 - Rocker Switch Bracket with Two (2) Rocker Switches
(Not evaluated by UL)

All components of these Trove kits are UL Listed sub-assemblies.

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

Installation Guide



All registered trademarks are property of their respective owners.

Rev. TSS_062223

Installing Company: _____ Service Rep. Name: _____

Address: _____ Phone #: _____



More than just power.™

Overview:

Altronix Trove S2 kits are pre-assembled and consist of Trove enclosures/backplanes with factory installed Altronix power supply/chargers and sub-assemblies. Kits accommodate Lenel-S2 (S2 Security Platform) S2-INST Installation Kit(s) for S2 Network Node for up to eight (8) (T2SSK7F8(D)), fourteen (14) (T2SSK75F14(D)) or twenty-eight (28) (T3SSK75F28(D)) doors in a single enclosure.

Configuration Chart:


Altronix Model Number	120VAC 60Hz Input Current (A)	Power Supply Board Input Fuse Rating	Power Supply Board Battery Fuse Rating	Nominal DC Output Voltage				Maximum Supply Current for Main and Aux. Outputs on Power Supply board and ACM8(CB) Access Power Controllers' outputs	Fail-Safe/Fail-Secure Outputs	Additional Fused (PTC) Outputs	ACM8(CB) Board Input Fuse Rating	ACM8(CB) Board Output Fuse (PTC) Rating	ACM4(CB) Board Input Fuse Rating	ACM4(CB) Board Output Fuse (PTC) Rating	PDS8(CB) Board Input Fuse (PTC) Rating	PDS8(CB) Board Output Fuse (PTC) Rating	PD8UL(CB) Board Output Fuse (PTC) Rating	PD16W(CB) Board Output Fuse (PTC) Rating
				Power Supply 1		Power Supply 2												
				[DC]	[Aux]	[DC]	[Aux]											
				Output Range (VDC)	Output Range (VDC)	Output Range (VDC)	Output Range (VDC)											
T2SSK7F8	4.5	eFlow104NB 6.3A/250V	15A/32V	20.17-26.4	20.28-26.4	-	-	24VDC @ 9.7A	8	8	10A/250V	3.5A/250V	-	-	10A/32V	3A/32V	-	-
T2SSK7F8D		eFlow102NB 5A/250V	20.17-26.4	20.28-26.4	-	-	24VDC @ 9.7A	8	8	10A/250V	2.5A	-	-	9A	2.5A	-	-	
T2SSK75F14	7.5	eFlow104NB 6.3A/250V	15A/32V	20.17-26.4	20.28-26.4	9.7-13.2	10.03-13.2	24VDC @ 9.4A	16	16	10A/250V	3.5A/250V	-	-	-	-	3.5A/250V	-
T2SSK75F14D		eFlow102NB 5A/250V	20.17-26.4	20.28-26.4	9.7-13.2	10.03-13.2	24VDC @ 9.4A	16	16	10A/250V	2.5A	-	-	-	-	2.5A	-	
T3SSK75F28	7.5	eFlow104NB 6.3A/250V	15A/32V	20.17-26.4	20.28-26.4	9.7-13.2	10.03-13.2	24VDC @ 9.4A	28	32	10A/250V	3.5A/250V	10A/32V	3A/32V	-	-	-	3.5A/250V
T3SSK75F28D		eFlow102NB 5A/250V	20.17-26.4	20.28-26.4	9.7-13.2	10.03-13.2	24VDC @ 9.4A	28	32	10A/250V	2.5A	10A/32V	2.5A	-	-	-	2.5A	

Installation Instructions:


Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

1. Remove backplane from enclosure. Do not discard hardware.
2. Mark and predrill holes in the wall to line up with the top two/three keyholes in the enclosure. Install two/three upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two/three upper screws; level and secure. Mark the position of the lower three holes. Remove the enclosure. Drill the lower holes and install the three fasteners. Place the enclosure's upper keyholes over the two/three upper screws. Install the three lower screws and make sure to tighten all screws.
3. Mount included UL Listed tamper switch (Altronix Model TS112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (*Fig. 1, pg. 2*). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
4. Mount S2-INST Installation Kit to backplane, refer to *pages 3, 4*.
5. Refer to the *eFlow Power Supply/Charger Installation Guide* for eFlow104NB, eFlow102NB and corresponding *Sub-Assembly Installation Guides* for ACM8(CB), PDS8(CB), VR6, PD8UL(CB) and PD16W(CB) for further installation instructions.

Fig. 1

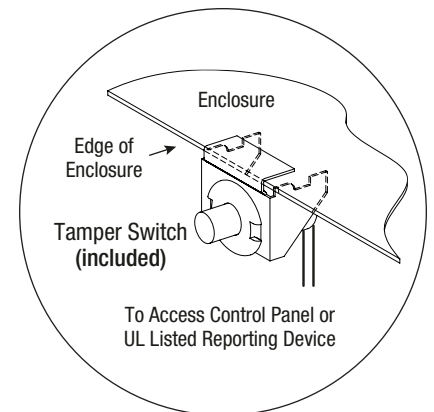

Hardware:



T2SSK7F8(D): Access Controller Position Chart for the S2-INST Installation Kit:

1. Align S2-INST mounting holes with pems on TSS2 (Fig. 2, pg. 3).
2. Attach S2-INST to backplane with lock nuts (provided) (Fig. 2a, pg. 3).
3. Mount backplane to enclosure with hardware.
4. Fasten TSS2 backplane to Trove2 enclosure utilizing hardware (provided).

Fig. 2

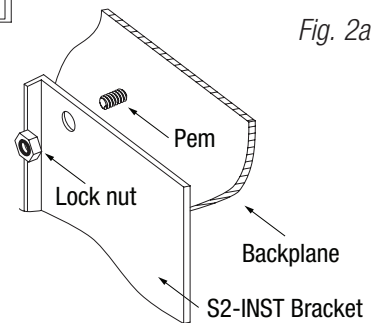
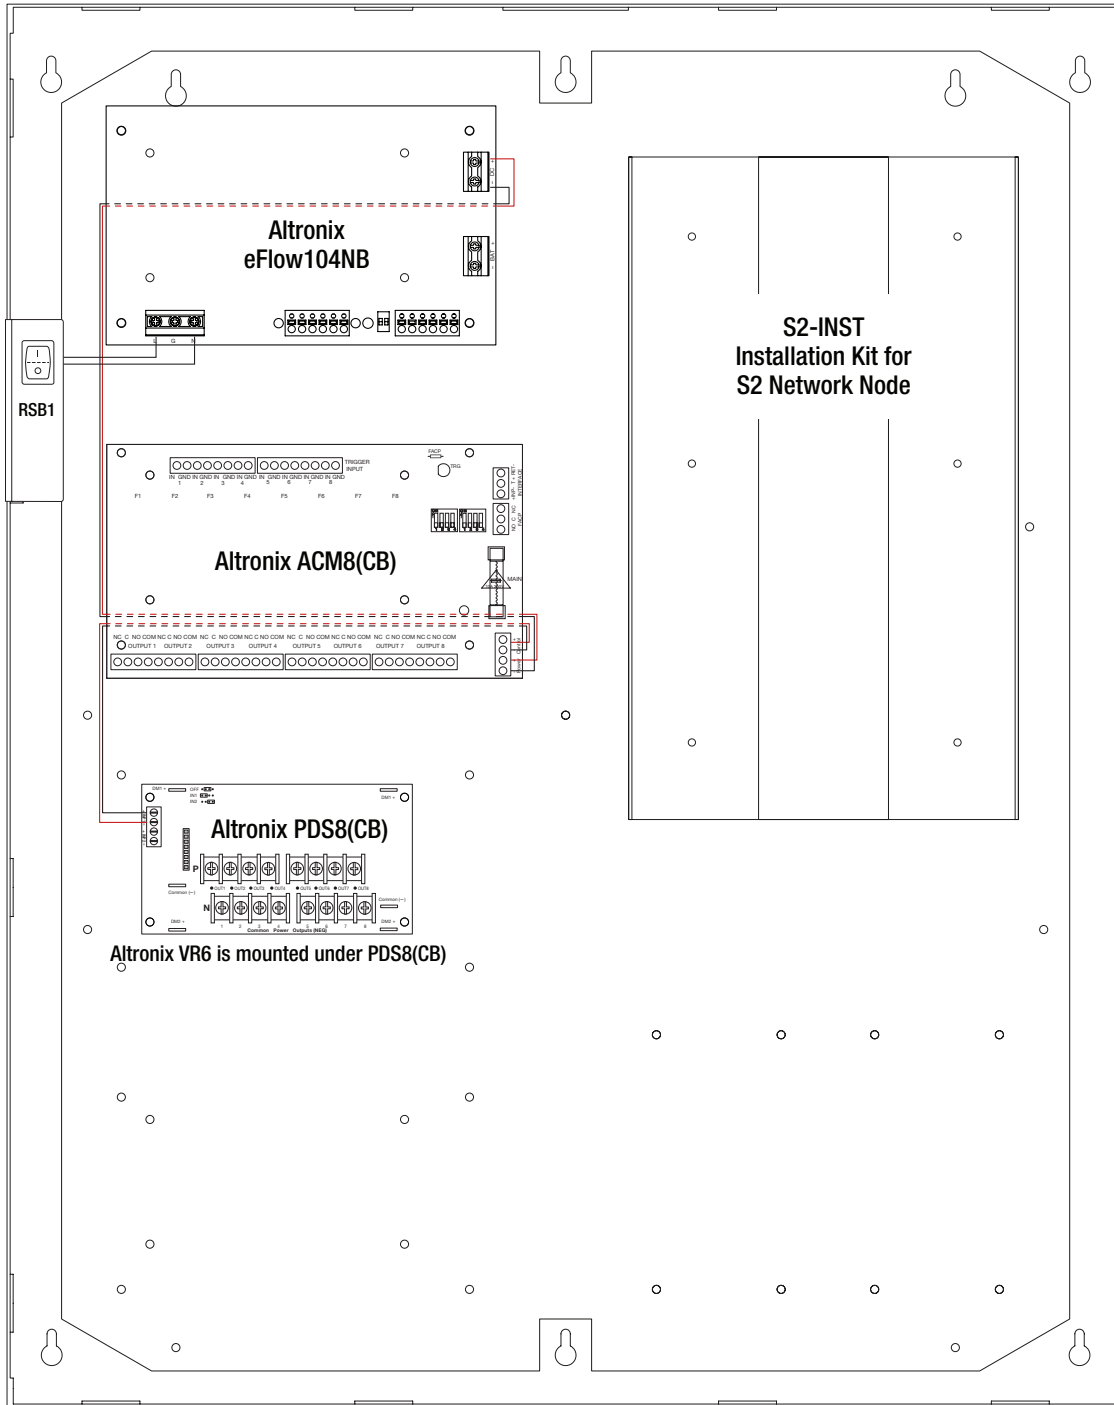


Fig. 2a

T2SSK75F14(D): Access Controller Position Chart for the S2-INST Installation Kit:

1. Align S2-INST mounting holes with pems on TSS2 (Fig. 3, pg. 4).
2. Attach S2-INST to backplane with lock nuts (provided) (Fig. 3a, pg. 4).
3. Mount backplane to enclosure with hardware.
4. Fasten TSS2 backplane to Trove2 enclosure utilizing hardware (provided).

Fig. 3

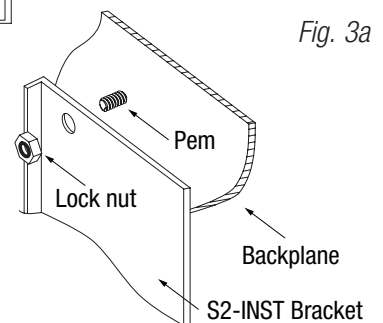
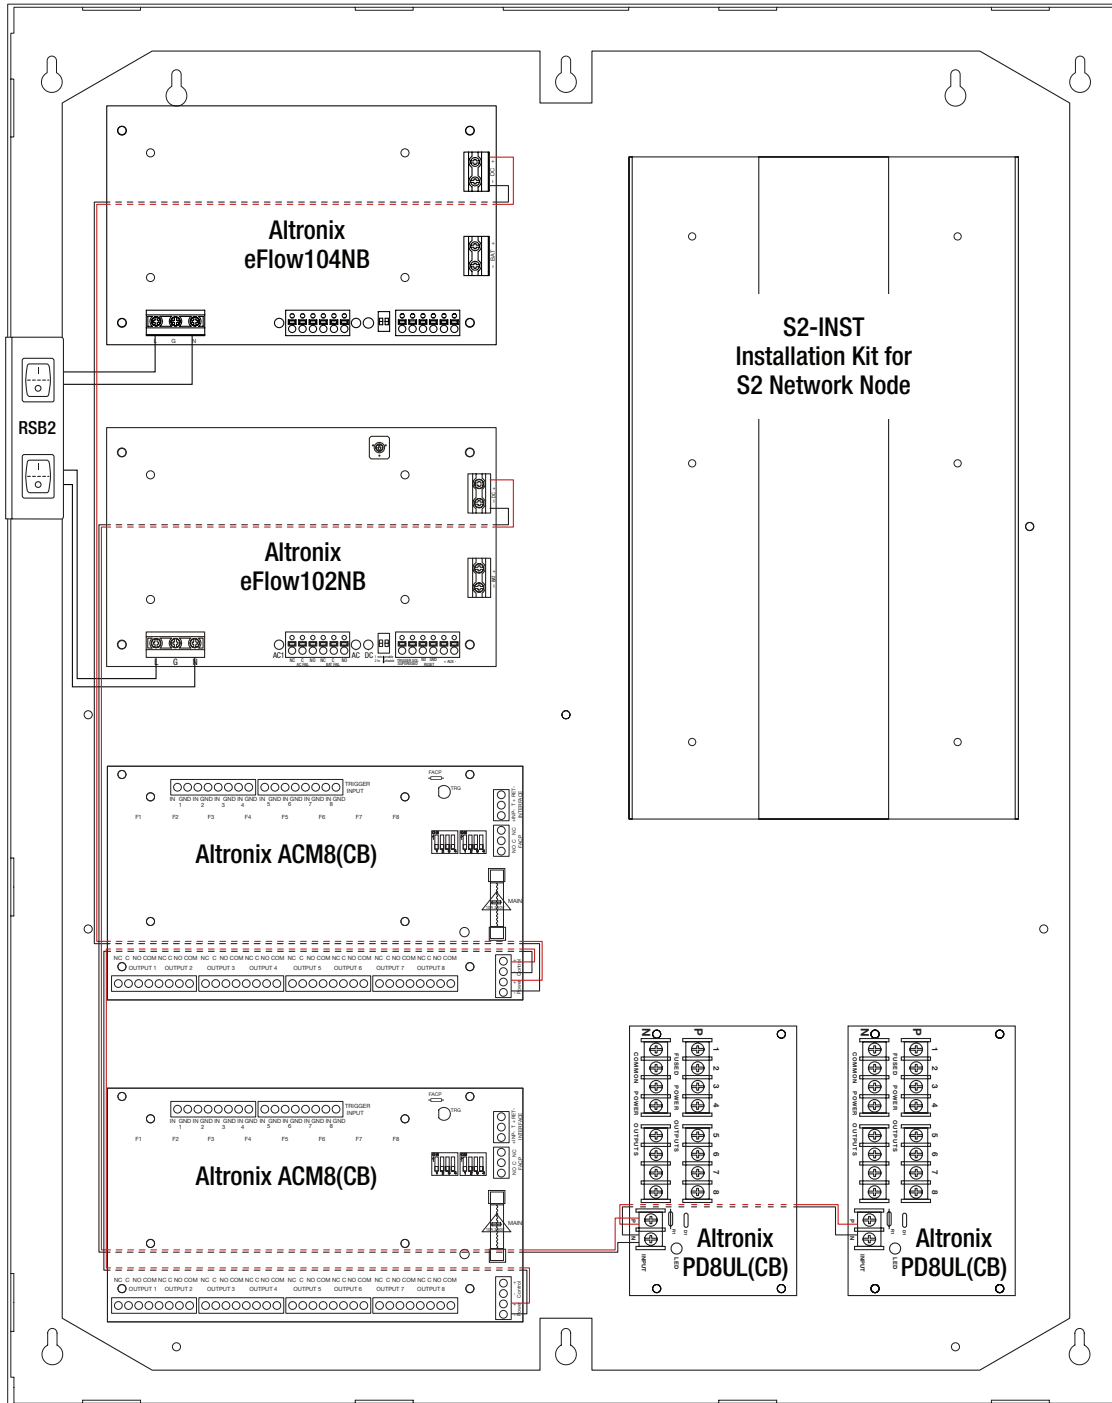


Fig. 3a

T3SSK75F28(D): Access Controller Position Chart for the S2-INST Installation Kit:

1. Align S2-INST mounting holes with pems on TSS3 (Fig. 4, pg. 5).
2. Attach S2-INST to backplane with lock nuts (provided) (Fig. 4a, pg. 5).
3. Mount backplane to enclosure with hardware.
4. Fasten TSS3 backplane to Trove3 enclosure utilizing hardware (provided).

Fig. 4



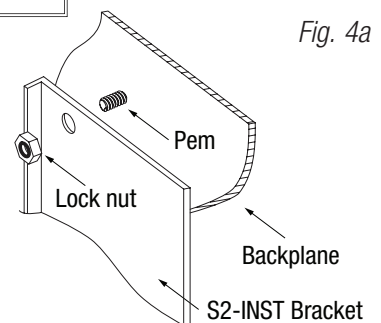


Fig. 4a

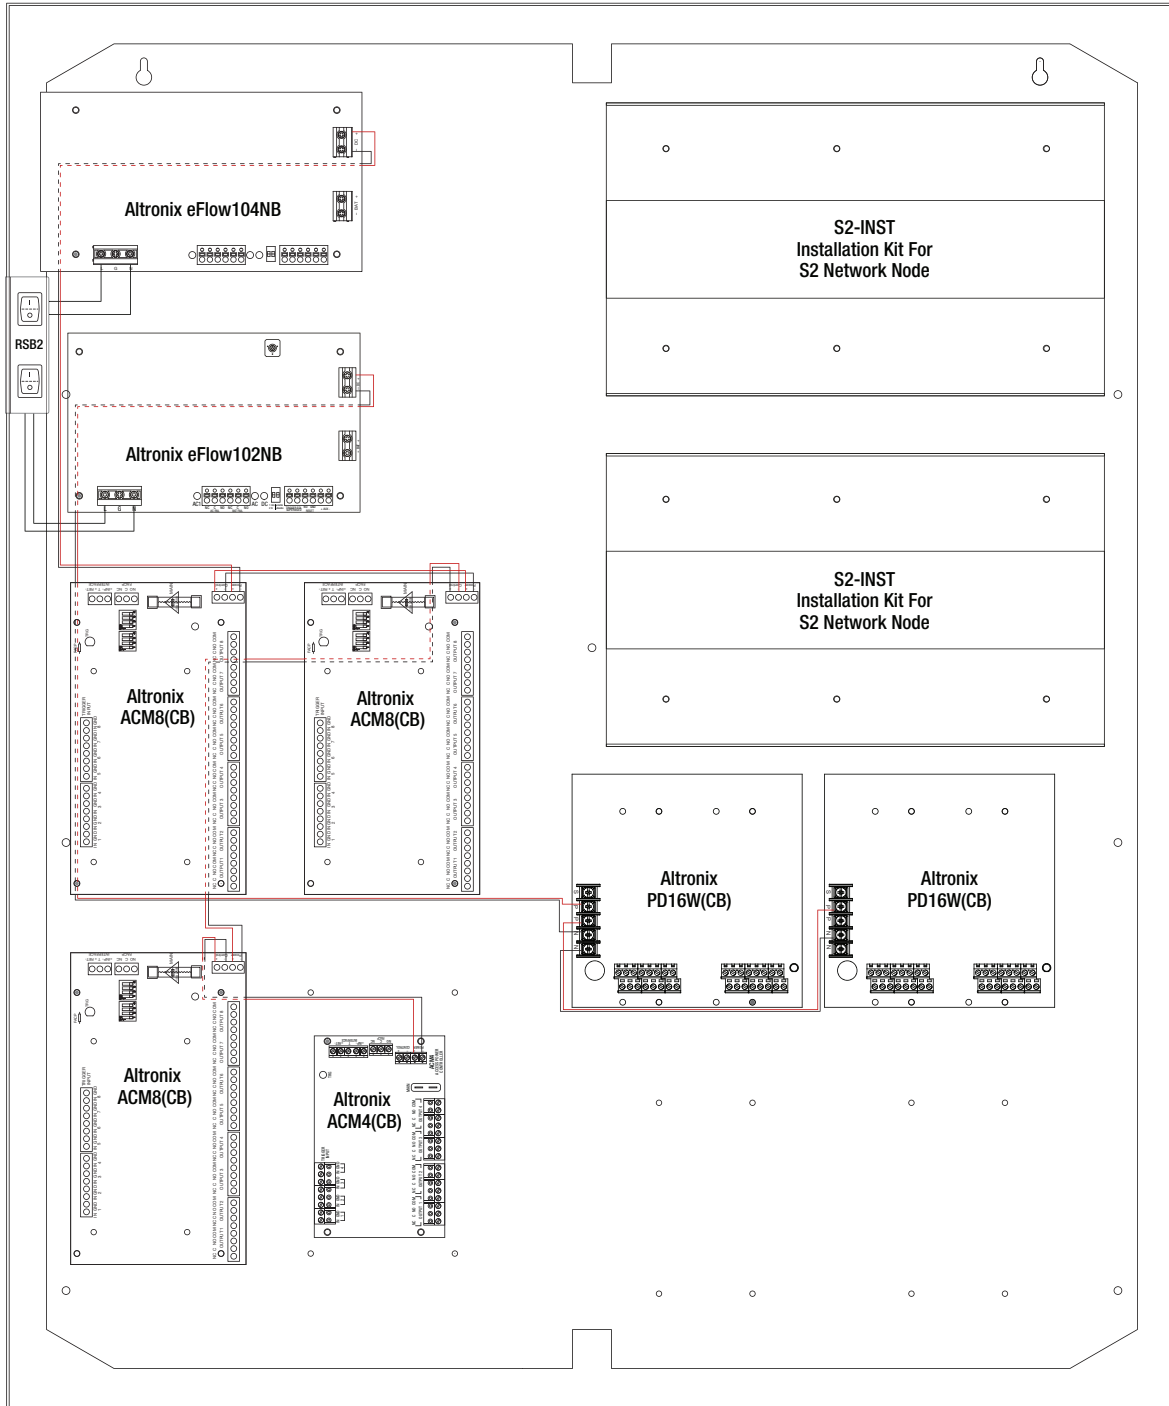

eFlow Power Supply/Chargers can be Controlled and Monitored while Reporting Power/Diagnostics from Anywhere over the Network...

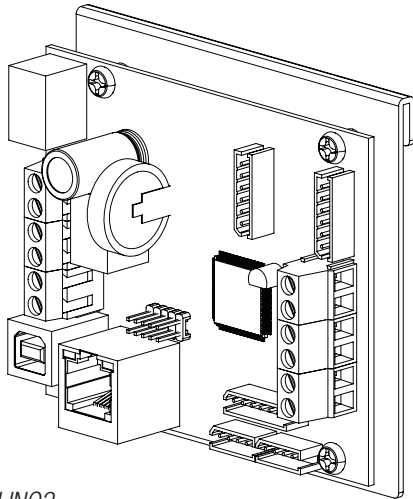

LINQ™

LINQ2 - Network Communication Module


LINQ2 provides remote IP access to real-time data from eFlow power supply/chargers to help keep systems up and running at optimal levels. It facilitates fast and easy installation and set-up, minimizes system downtime, and eliminates unnecessary service calls, which helps reduce Total Cost of Ownership (TCO) - as well as creating a new source of Recurring Monthly Revenue (RMR).

LINQ2

Features:


- UL Listed in the U.S. and Canada.
- Local or remote control of up to (2) two Altronix eFlow power output(s) via LAN and/or WAN.
- Monitor real time diagnostics: DC output voltage, output current, AC & battery status/service, input trigger state change, output state change and unit temperature.
- Access control and user management: Restrict read/write, Restrict users to specific resources
- Two (2) integral network controlled Form "C" Relays.
- Three (3) programmable input triggers: Control relays and power supplies via external hardware sources.
- Email and Windows Dashboard notifications
- Event log tracks history.
- Secure Socket Layer (SSL).
- Programmable via USB or web browser - includes operating software and 6 ft. USB cable.

LINQ2 Mounts Inside any Trove Enclosure

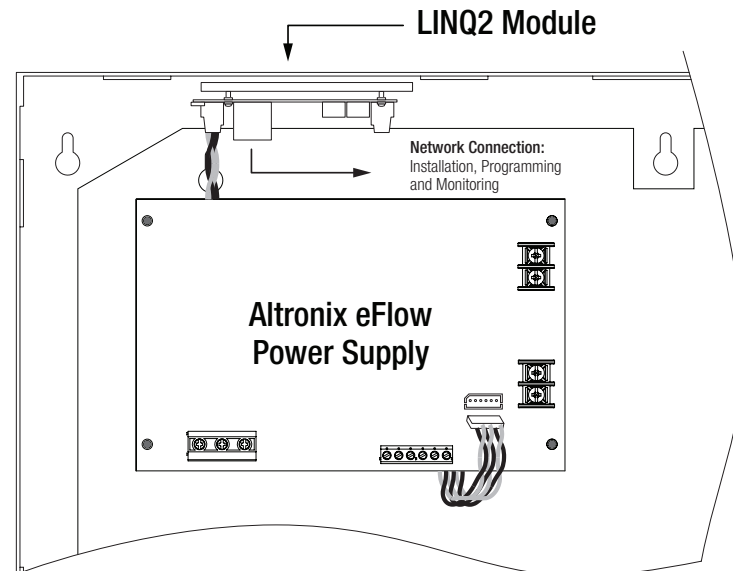


T2SSK7F8(D) and T2SSK75F14(D) Enclosure Dimensions (H x W x D):

27.25" x 21.75" x 6.5" (692.2mm x 552.5mm x 165.1mm)

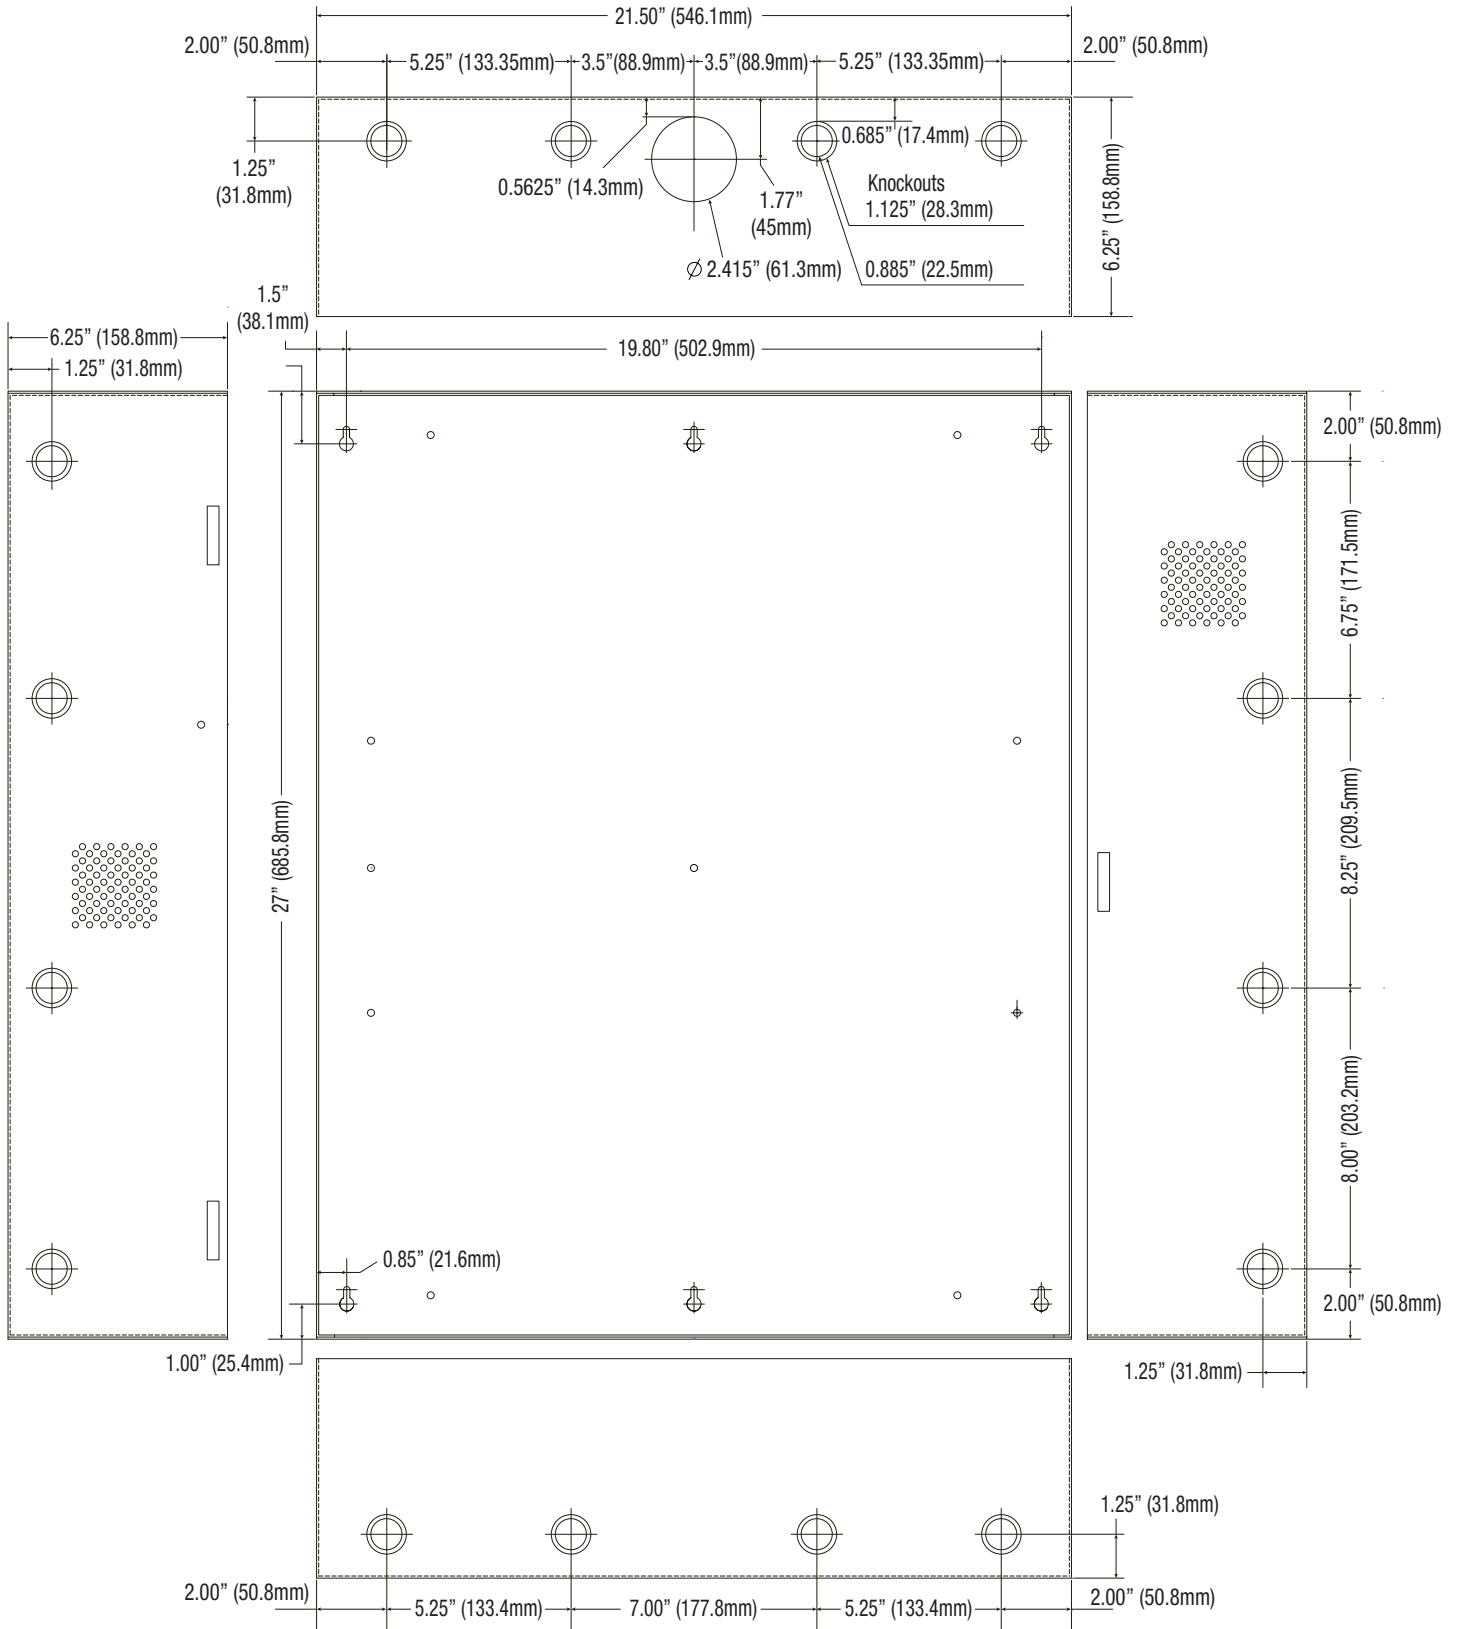

T3SSK75F28(D) Enclosure Dimensions (H x W x D approximate):

36.12" x 30.125" x 7.06" (917.5mm x 768.1mm x 179.3mm)

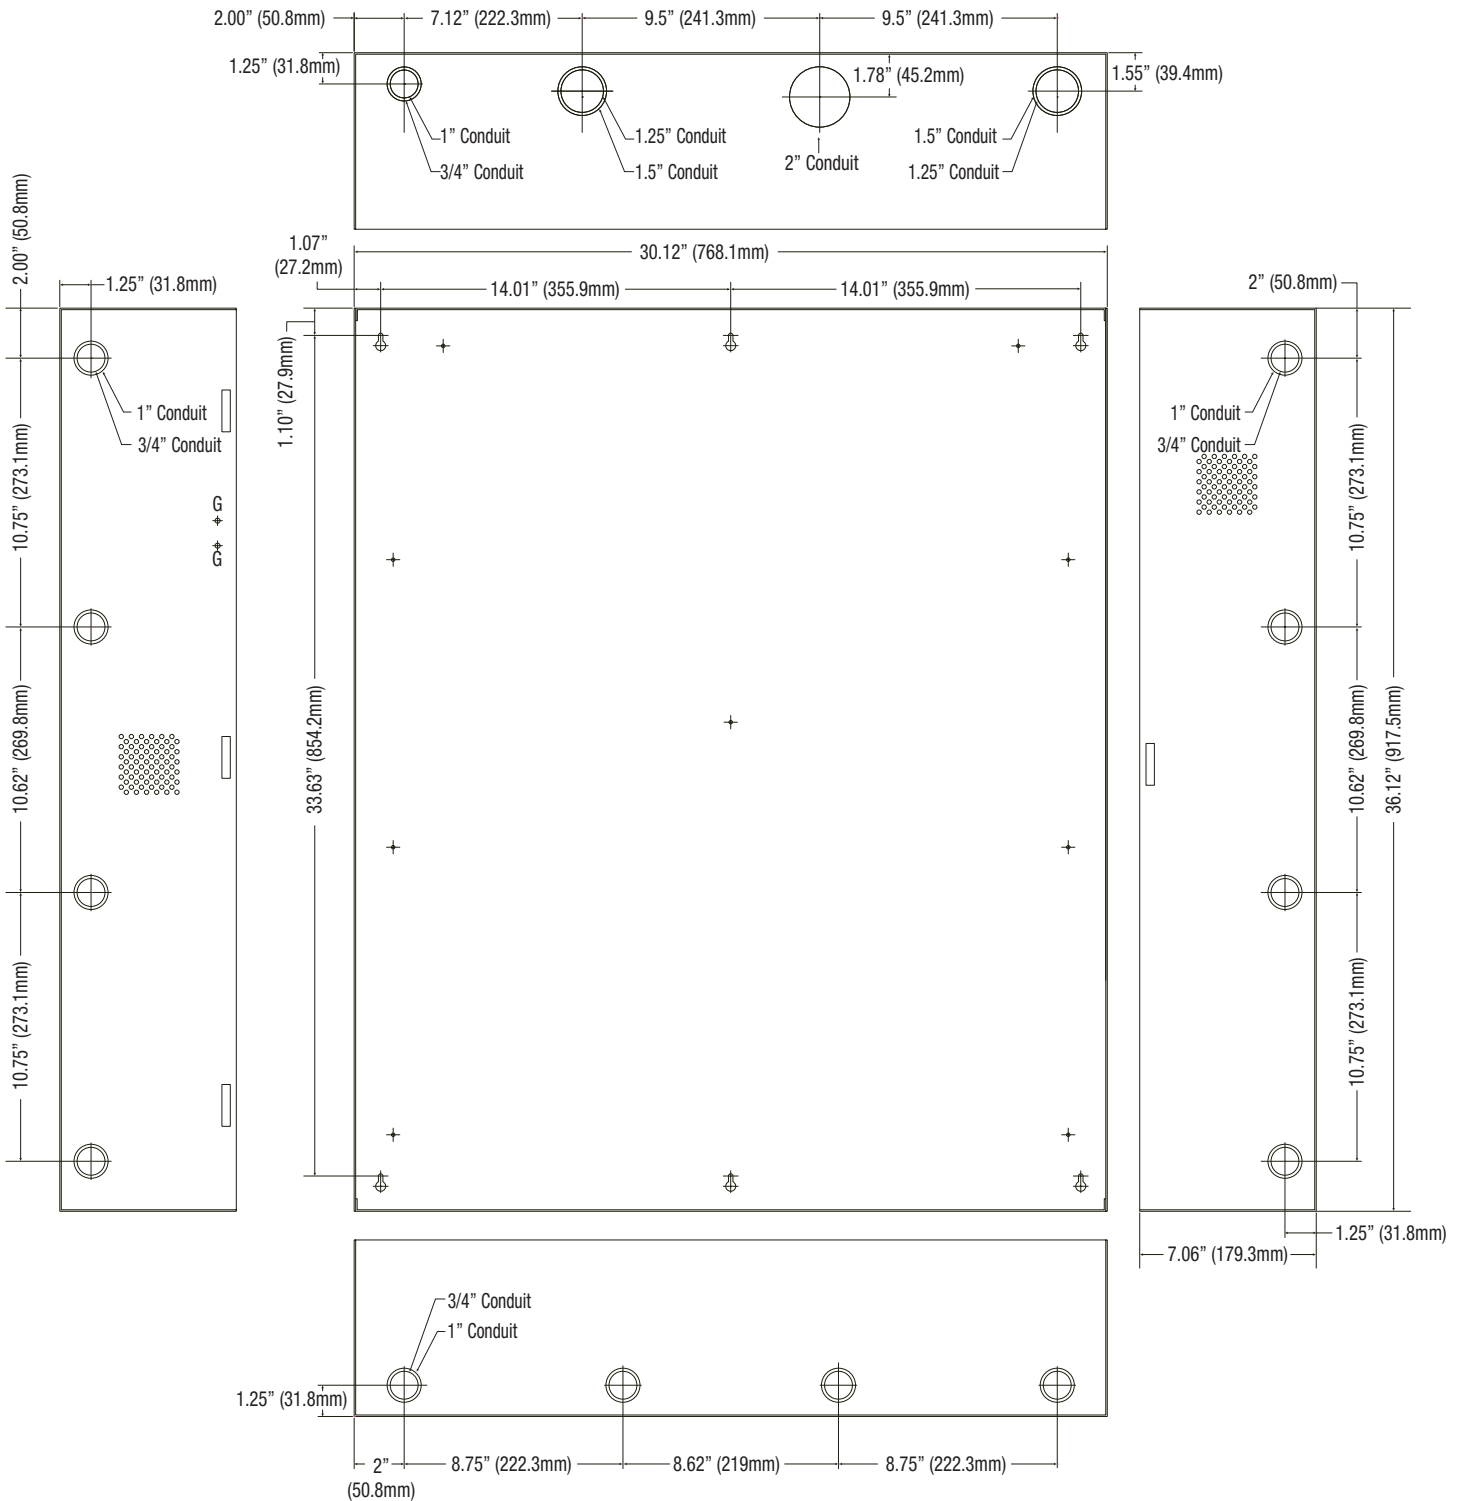

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056
 web site: www.altronix.com | e-mail: info@altronix.com | Lifetime Warranty
 IITrove SS Kits

F22W

